


# Antenna Cover

## 2005-2014

**MMD**  
MODULAR MUSCLE DESIGN


 **Note:** Be sure to thoroughly clean the area of the decklid around the antenna to ensure good adhesion of the 3M tape.

1



Clean the area around the factory antenna thoroughly with the supplied alcohol prep pad.

2

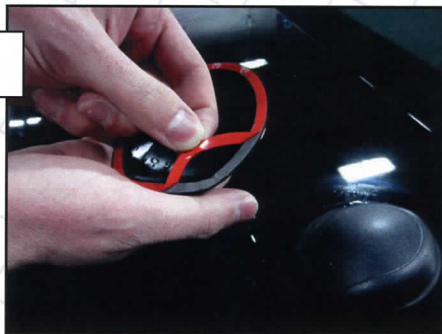

Remove the backing from the 3M tape on the back side of the cover as shown.

3



Be sure to center the cover over the factory antenna and place it on the decklid. Once the cover is properly located, firmly press down to full seat the adhesive tape.

## Supplemental Installation Instructions for MMD Carbon Fiber Exterior Accessories


*This supplemental guide is to be used in addition to the full installation guide included with your purchase. This guide will ensure that the 3M adhesive tape bonds properly to both the product and the vehicle and does not come loose from the vehicle.*

**Step1:** Using the supplied alcohol prep pads, thoroughly wipe down the areas of the part where the adhesive tape will be applied.


**Step 2:** Once the alcohol has dried (30-60 seconds), wipe the surface with the included 3M Adhesion Promoter Pad.

**Step3:** Wait 60 seconds for the Adhesion Promoter to dry then apply the included 3M tape as shown in the photos below. You may now proceed with the main installation guide that shows how to apply the product to the vehicle.


### 71326-77 / Antenna Cover (05-14)

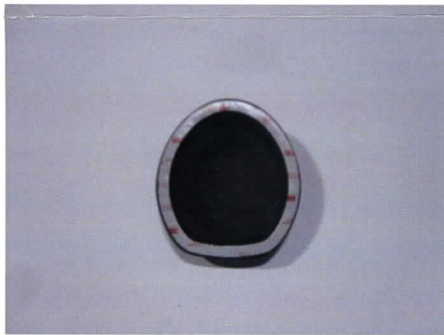

### 71332-77 / Emblem Surround (10-12)

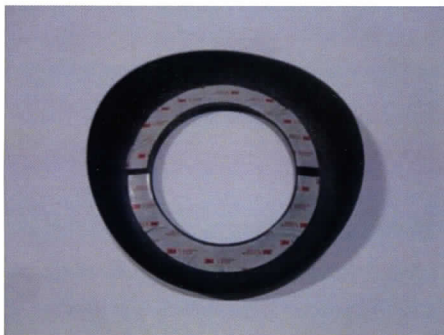


### 41271-77 / Tail Light Trim (10-12)

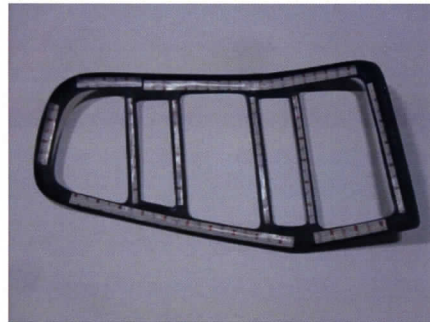

### 71324-77 / Tail Light Trim (13-14)



### 71336-77 / Roof Spoiler (05-14)

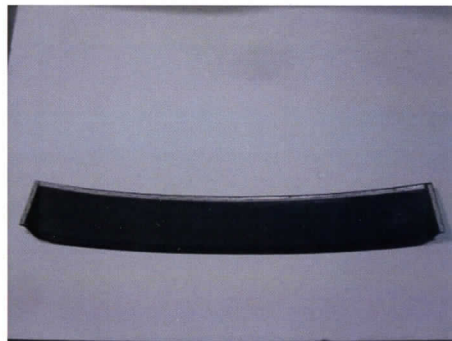

### 71329-77 / Ducktail Spoiler (10-14)

There is a roll of 3M tape provided with this spoiler. Cut the tape to proper length and apply around the outer edge on the underside of spoiler.