

2010-2014 Ducktail Spoiler


Contents:

- (1) - MMD Ducktail Spoiler
- (4) - Mounting Screws
- (4) - Washers

Tools Required:


- 10mm Socket/Wrench
- Phillips Head Screwdriver
- Trim Removal Tool
- Plastic Chisel
- Adhesive Remover

1

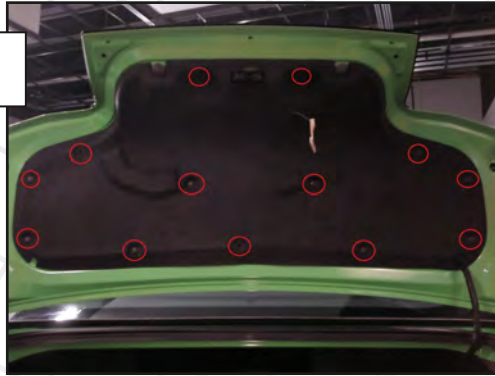


Using a trim removal tool or similar, remove the 13 plastic clips securing the trunk liner to the decklid and remove it from the vehicle.

3

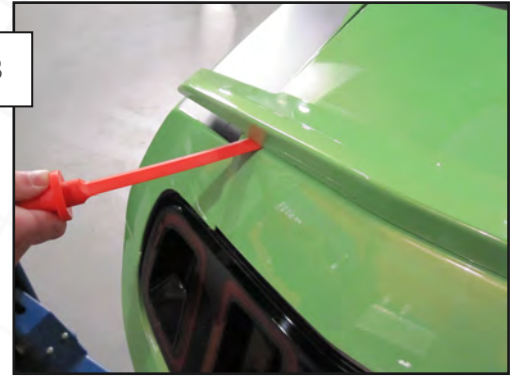

Close the lid and use a plastic chisel or similar tool that will not scratch your paint and remove the spoiler from the decklid. Once the spoiler is removed, use adhesive remover to clean up any residue left by the factory adhesive tape.

2

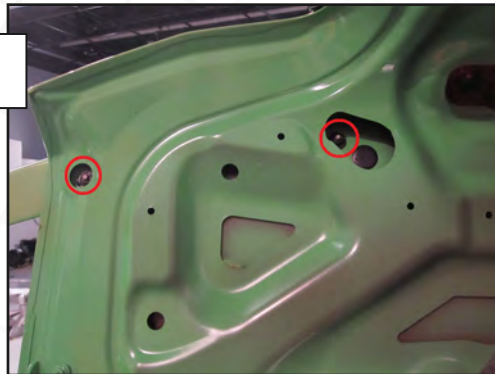


Remove the four 10mm nuts securing the factory spoiler to the trunk lid. ***Be sure to have someone holding the spoiler so it does not drop and hit the vehicle once the nuts are removed.***

4



Once the decklid is clean and free of adhesive, wipe down the surface with the supplied alcohol pads as shown. Be sure to wipe all areas that the adhesive on the new spoiler will come in contact with.

5

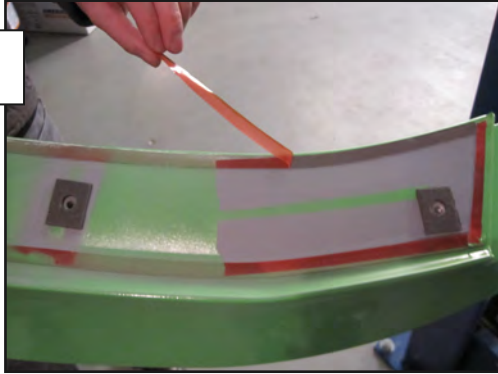

Place the four included foam pads over the threaded insert holes in the spoiler as shown. Peel the backing from the adhesive tape on the underside of the spoiler.

7

Once all four screws are installed and the spoiler is secure, press down firmly around all edges of the spoiler to fully seat the adhesive tape.

6



Place the spoiler on the decklid while lining the threaded inserts with the factory spoiler holes, but do not press down to seat the adhesive at this point. Using the supplied Phillips Head screws & washers, secure the spoiler to the decklid as shown.

MM
MODULAR MUSCLE DESIGN