

1999-2004 HOOD SCOOP

Tools Required:

Power Drill
 3/8" Drill Bit
 Trim Removal Tool
 7mm Socket & Ratchet
 Masking/Painters Tape
 Center Punch
 X-acto Knife or Razor Blade

Contents:

(1) - Hood Scoop
 (1) - Hood Scoop Insert
 (1) - Tape Kit
 (1) - Drill Template
 (6) - Clip Stud/Washer/Nut Assemblies
 (2) - 3M Adhesion Promoter Pads
 (4) - Alcohol Prep Pads




Be sure to use the Alcohol Prep Pads and 3M Adhesion Promoter Pads as instructed.

If you are installing this MMD Hood Scoop on a car that already has a GT Scoop, remove the GT Scoop and skip to Step 5 of this installation guide.


STEP 1 // Open the hood and remove the 11 plastic retaining pins securing the hood insulation pad. A trim removal tool works best for this job, but a flat head screwdriver can be used. Once all of the clips are removed, set the insulation pad aside.



STEP 2 // Using an X-Acto knife or sharp razor blade, cut out the two sections of the drill template on the OUTSIDE of the black lines as shown.

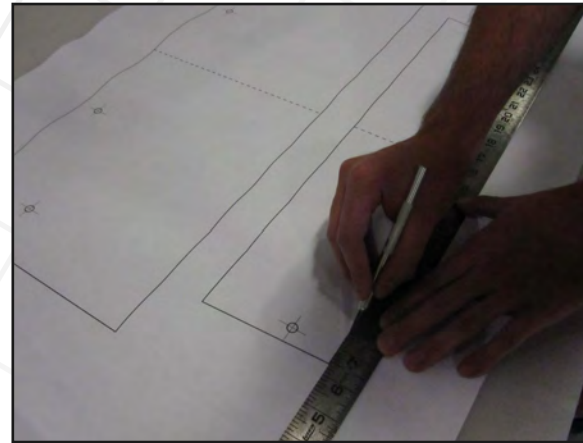

STEP 3a // Install the lower template first by lining it up on the edge of the factory scoop and along the two outside edges as shown.

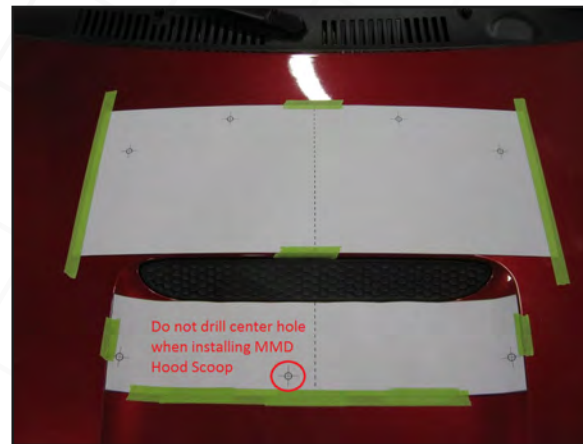


STEP 3b // The upper template is installed on the upper edge of the factory scoop, using the dotted center line as a guide (this dotted line should be matched with the dotted line on the lower template).

Note: Do not drill the lower center hole when installing this MMD Hood Scoop.

STEP 4 // Center punch the 6 holes and drill up to a 3/8" hole. (It may help to step up gradually to 3/8" by using 3/16" then 1/4" bits) When finished, remove the drill templates and clean any leftover fiberglass shavings using a Shop Vac.




STEP 5 // Before installing any adhesive tape, use the supplied alcohol pads to thoroughly wipe down the tape edges on both the scoop & insert. Once the alcohol is dry, follow with the supplied 3M Adhesion Promoter. Place tape on the scoop as shown, along with the 6 clip studs.

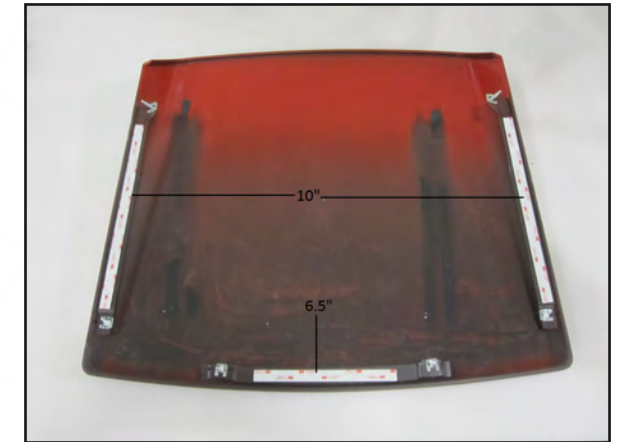

STEP 6a // Install the 4 pieces of tape to the top of the insert and install on the underside of scoop as shown.




STEP 6b // Once attached to the insert, place the remaining 3 pieces of tape on the underside of the insert.

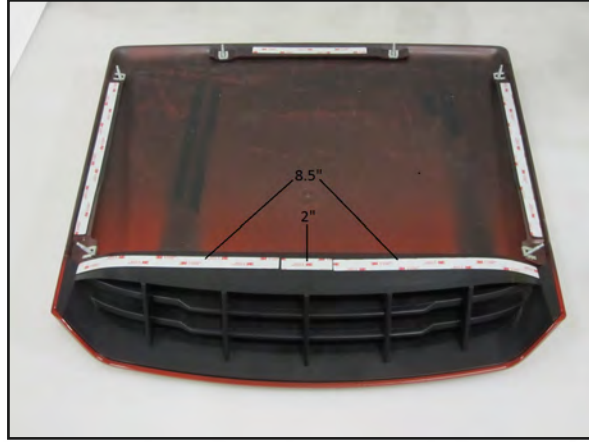

STEP 7 // Peel the backing from the adhesive tape and place the scoop on the hood aligning the rear studs first. Don't fully press down on the scoop until all studs are properly located and the scoop is in its desired location. Once it is properly aligned, move around the edges and firmly press down to fully seat the adhesive.



STEP 8 // Install the washers & nuts on the underside of the hood using a 7mm socket. Just tighten until snug, over tightening the nuts could possibly damage the hardware.

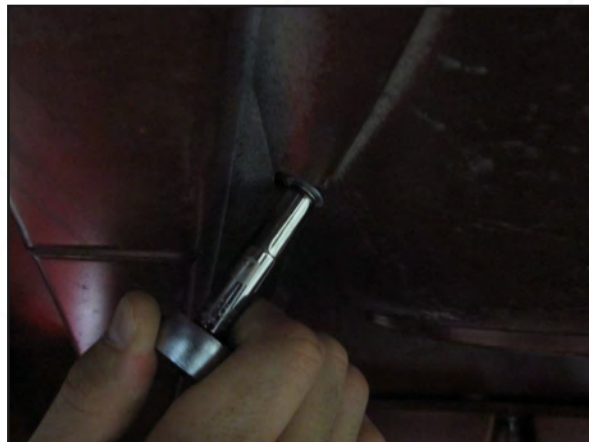

STEP 9 // Once all 7 sets of washers & nuts are installed and the scoop is secure, re-install the hood insulation pad removed in Step 1 to complete the installation.