

Contents:

- (1) Middle Tail Light
- (1) Driver Outside Tail Light
- (1) Passenger Outside Tail Light
- (4) Control Boxes

Tools Required:

- Trim Panel Removal Tool
- Phillips Head Screw Driver
- Utility Knife

LED Tail Lights

08-14 Challenger



Step 1

Begin by removing the (4) twist caps, and (2) bump stops located on the trunk.



Step 2

Using a panel removal tool, carefully pry the taillight cover off each side of the middle taillight.



Step 3

Using a Phillips head screw driver, locate and remove the screw securing the light to the trunk.



Step 4

Carefully pry the light away from the trunk, and unplug the wiring harness connector.




Step 5

Using a panel removal tool, carefully pry the inside taillight trim piece covers away from the body of the vehicle.



Step 6

Pry back the trunk liner, and locate and remove the (2) taillight twist nuts.

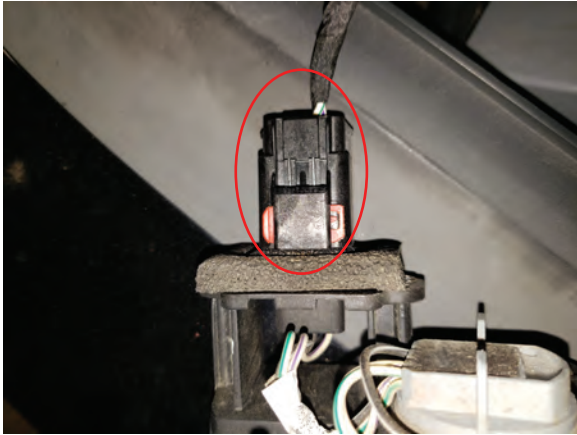

Step 7

Carefully remove the outside taillights, and unplug the wiring connectors.



Step 8

Using a Phillips head screw driver, locate and remove the (3) screws on each side taillight securing the weather seal. Transfer these seals to the new Raxiom side lights.




Step 9

If your vehicle is equipped with the trunk release button, carefully cut out the middle section of the Raxiom taillight using a utility knife. Transfer the trunk release button from the factory light to the Raxiom light using the factory hardware.



Step 10

Twist, and unplug the factory wiring harness from the factory middle taillight assembly, and transfer to the new Raxiom middle taillight.

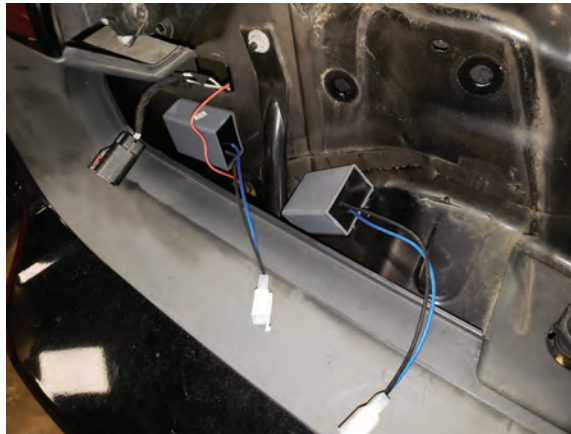

Step 11

Install the (2) control boxes to the chassis of each side of the outside taillights. These control boxes are held in place by 3m tape. **Note: Make sure these control boxes are not in the way of making contact with the taillights.



Step 12

Install the tail light in the reverse order.