


Quarter Window Scoop 08-19 Challenger

1



Wash the quarter window with soap and water. Allow the window and surrounding area to dry. ****Recommended:** Wipe the window down with isopropyl alcohol to ensure the cleanest surface possible.

2

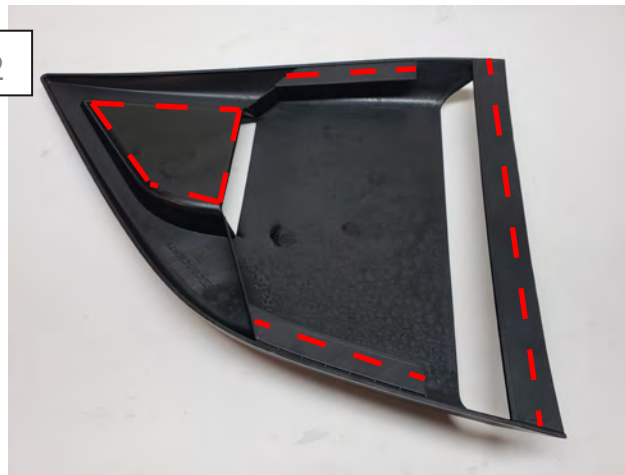

Apply the supplied 3M tape to the scoop as seen above. Test fit the insert on the scoop to familiarize yourself with how it fits.

3



Remove the tape backing and install the scoop.

4



Apply firm even pressure to all taped surfaces to ensure proper adhesion.