

# MP CONCEPTS

## CONTENTS:

- (1) Louver
- (10) Foam Pads
- (12) Pieces of 3M
- (12) Mounting Pads w/ Nuts
- (2) Alcohol Pads
- (2) Adhesion Promoter

## REQUIRED:


- 8mm Socket
- Ratchet

## Rear Window Louver (08-19 Challenger)




1

Begin by thoroughly cleaning the rear window glass using the supplied alcohol pad to ensure the glass is free of any and all road debris.

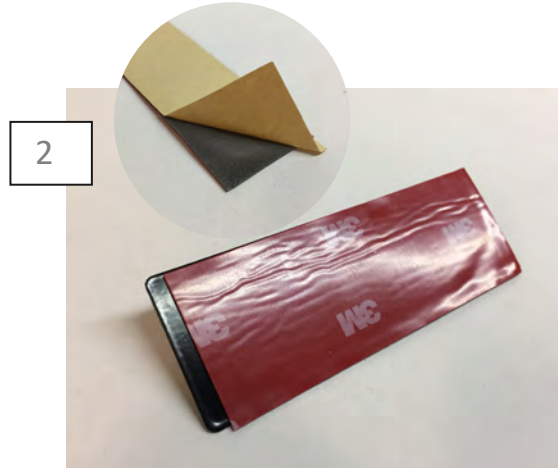

2

Install the tape to the mounting pads. Peel off the paper backing from the supplied 3M tape leaving the red 3M layer visible.

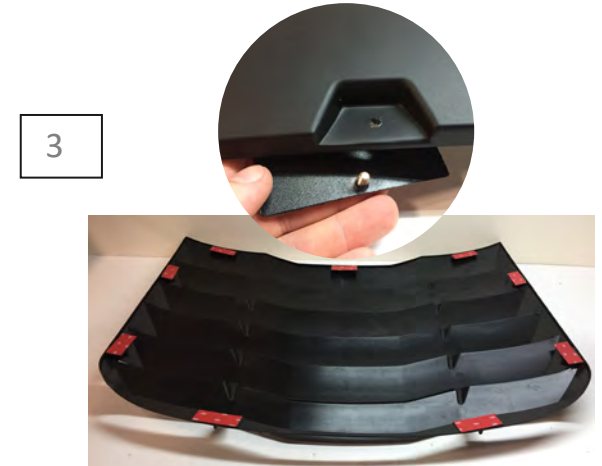

3

Remove the 8mm nuts for the mounting pads and install the mounting pads to rear window louver. Test fit the louver to the rear window prior to removing the tape backing. Familiarize yourself with how the louver fits. Center the louver side to side. Align the top edge with the top of the glass.



4

Once the rear window is clean/dry and free of contaminants, remove the red tape backing and set the louver on the window.



5

Remove the 8mm nuts and carefully remove the louver from the window. You want to make sure all of the mounting pads stick to the glass. Once the louver is removed, apply firm even pressure on all mounting pads to ensure proper adhesion to the window. Reinstall the window louver.



6

Install the supplied foam pads to prevent the louver from rattling against the window glass. It is recommended to install the foam with the louver already installed to ensure proper placement. Remove the tape back and install the foam so that the louver does not touch the glass.

