

Resonator Delete

(15-16 Challenger 5.7L Auto)

(15-18 Challenger 6.4L)

Contents:

- (1) Driver Side Resonator Delete Pipe
- (1) Passenger Side Resonator Delete Pipe
- (2) Exhaust Clamps

Tools Required:


- Jack & Jack Stands
- Sawsall
- 15mm Socket & Ratchet
- Tape Measure
- Safety Glasses

Step 1:

Raise and support the vehicle using a jack & jack stands to access the factory resonators.

Step 2:

Line up the resonator delete pipe with the factory resonator. Using a tape measure, measure 9.25" from the exhaust hanger to the back of vehicle.

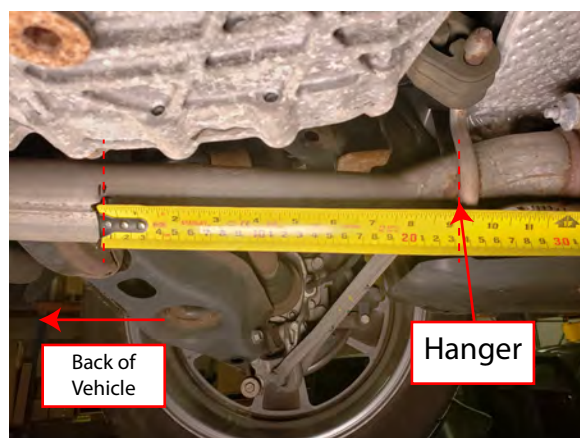

Step 3:

Carefully cut the factory exhaust so that you don't hit the driveshaft or fuel tank with the blade. **Note: Always use safety glasses.




Step 4:

Disconnect the factory resonator pipe from the exhaust hangers. Remove resonator pipe from vehicle.



Step 5:

Locate and cut the spot weld on the factory clamp holding the exhaust tip. Using a 15mm socket & ratchet, remove the factory exhaust tip. Transfer to the new delete pipe.

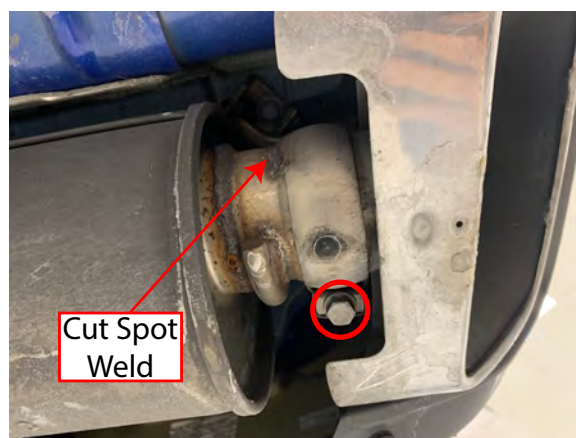

Step 6:

Insert the resonator delete pipe into the factory exhaust hangers. Then using the supplied exhaust clamp, secure the resonator delete pipe onto factory exhaust. Installation is complete.

