

How to Install A Matte Black Tail Light Conversion Decal

Fitment: All 2005-2009 Mustangs

Tools Required:

- Spray bottle with water/soap mixture
- Squeegee
- Towel
- Tail light decal
- Scissors

Installation:

1. Gather your materials that are necessary for installation
2. Spray your taillights with the water/soap mixture



3. Peel the back off the vinyl and prepare to install on the taillight



4. Place the vinyl onto the taillight and position as best as possible




5. Squeegee out any air bubbles after installing the vinyl



6. Once vinyl has been squeegeed and placed correctly, dab any remaining mixture left over after from the squeegee



7. You can gently blow-dry the vinyl decal to help speed up the drying time. NOTE: DO NOT OVERHEAT; can cause the vinyl to whiten and become misshapen.

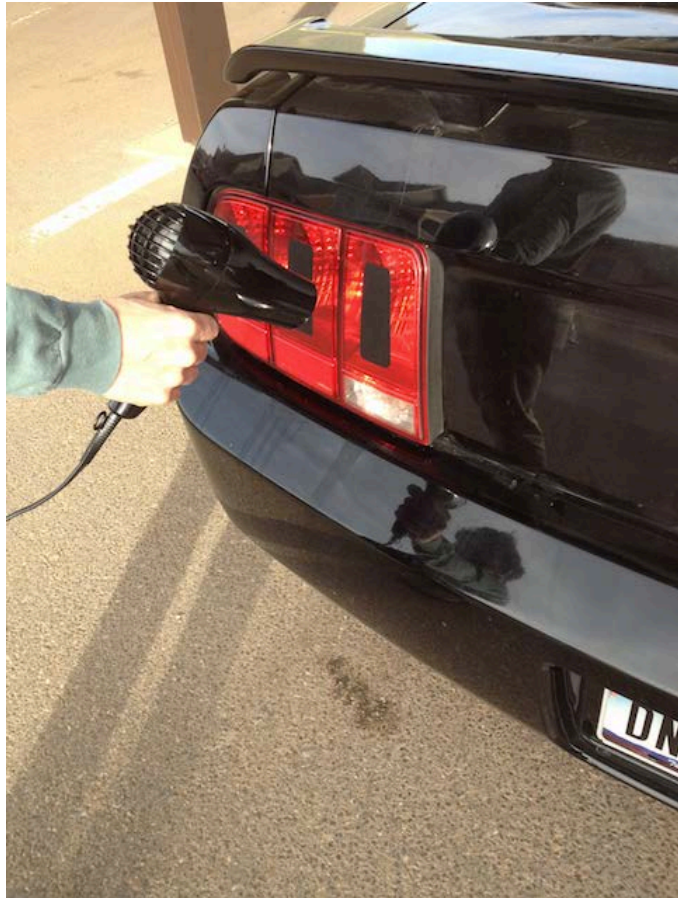

8. Inspect the installation and enjoy your Matte Black Tail Light Conversion Kit.



Installation instructions written by AM customer Laurence Arroyo 3/4/2014