



Installation Instructions for Raxiom Puddle Lights

Step 1:

Raise the front of the vehicle and support with jack stands. Remove both front wheels and inner fender liners. (Pic 1)

Step 2:

Locate the large body harness wiring grommet in the passenger side fender well behind the fender liner.

Step 3:

Carefully cut a slit in the grommet.

****Note** you may need to pull the grommet off of the sheet metal so that you can more easily pass the puddle light wire ends through the slit. (Pic2)

Step 4:


With the Puddle Lights laid out, you will notice one side has a shorter length of wire this is the passenger side (Pic 2 A). The long side will be carefully run to the driver side by way of the engine compartment (Pic 2 B).

Step 5:

Remove factory push clips holding on the side skirt. You will reuse these clips to install your puddle lights. I arranged the lights so there was a small amount of tension on the wiring to keep the wiring from hanging low (Supplied spacers are not needed.)

Step 6:

Carefully feed the driver side lights through gap that is directly to the right of the body grommet on the passenger side. The lights and wiring will feed under the AC hard lines. Then feed the lights through the gap below the master cylinder where the factory fuel lines come out. Zip tie the remaining wiring to the factory harness that runs across the back of the motor. (Pic 4)

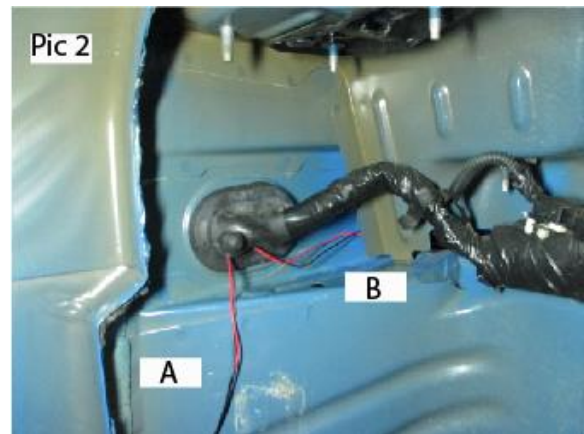

Step 7:

Locate the grommet you fed the puddle light wiring through on the interior of the vehicle. This will require removing the passenger side kick panel (Pic5). You will also need to remove the Passenger side A pillar cover to reveal the harness you are tapping into. The A pillar cover will pop off with some firm even pressure. (Pic 6)

Step 8:

Run the puddle light harness to the A pillar where you will splice into the factory wiring harness.

Red - Gray/Purple

Black - Black/Yellow

