




Driven Beyond Perfection

# BILLET HOOD PINS

## INSTALLATION INSTRUCTIONS

IS.6316892-0508

APPLICATION: 2005-2008 Mustang & 2007-2008 Shelby GT

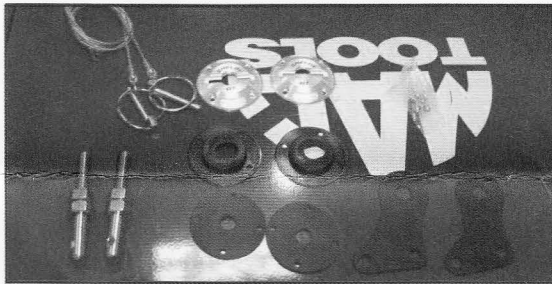

Kit contents: 2 Lanyards with stainless steel lynch pins, 2 billet plates, 8 screws, 2 metal brackets with 'L' markings, 2 poron seals, 2 delrin bushings, 2 stainless pins with nuts.

### TOOLS REQUIRED:

- Flat Head Screwdriver • Phillips Head Screwdriver • Rivet Gun
- 90 degree Power Drill • 3/4" Hole Saw with Long Pilot
- 3/4" Wrench • 10mm Wrench • Long 1/4" Drill Bit • 1/8" Drill Bit

### PREPARATION:

First, you must remove the plastic radiator cover by prying up on the plastic tabs with a flat head screwdriver, in two steps. Remove grille by starting on one side by pulling as you pry on fascia retaining tabs.

### INSTALLATION INSTRUCTIONS:

#### Step 1:

Loosen and remove radiator support bolts (2) on each side.

#### Step 2:

Install metal brackets underneath radiator support brackets and re-install bolts snug. (Do NOT tighten yet) Make sure brackets are facing outboard as shown on the passenger side.

#### Step 3:

Line up outboard edge of bracket with outboard edge of radiator support brackets for initial alignment. Tighten bolts.

#### Step 4:

Close hood. Drill a pilot hole all the way through the hood, from underneath, on both sides, using the bracket hole as a guide.

**Note:** In order to drill a perfectly normal hole to the bracket, a locator (see figure 4a) can be used in conjunction with a 90 degree drill.


#### Step 5:

Drill through all layers of the hood on both sides.

**Note:** Use a 3/4" hole saw with a long enough pilot to re-use the locating device, to stay normal to the mounting bracket. (see figure 5a)

#### Step 6:


Install hood pins snug on both sides.

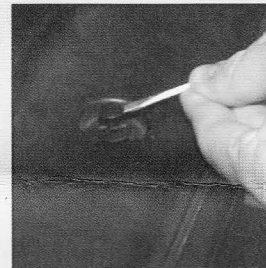


Preparation 1




Preparation 2

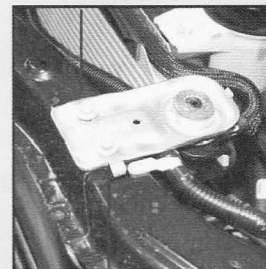


Step 1

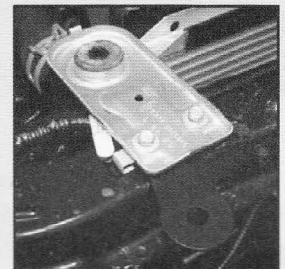


Step 2

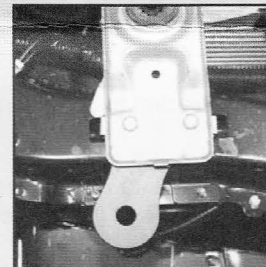


Step 3

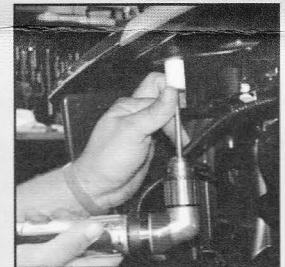

Step 4

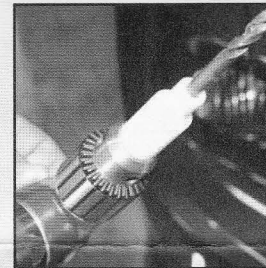


Step 4a

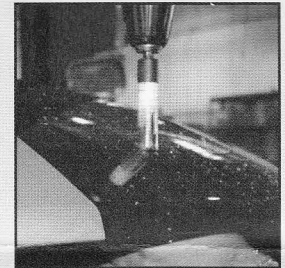

Step 5



Step 5a

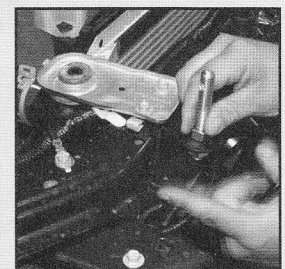

Step 6



## BILLET HOOD PINS

### Step 7:

Slowly close hood and check alignment to hole. Adjust bracket and/or pin until pin is centered in the hole. Tighten brackets. Temporarily slide on poron seal, delrin bushing and billet plate. Adjust height of pin until lynch pin slides in close on top of assembly. Remove seal, bushing and plate.

### Step 8:

Align lynch pin holes across car with each other. Once pin holes are lined up, tighten pins to bracket.

### Step 9:

Install poron seal & delrin bushing with thinner section of oval hole towards front of car.

### Step 10:

Install billet plate. Line up all holes. Install lynch pin to hold assembly in place.

### Step 11:

Drill holes (4) in hood to mount assembly. Use a 1/8" drill bit with a stop (or wrap end of drill bit with tape) to prevent damage to billet plate once through the hood. Blow away any debris.

**Note:** Pull away, or space out, underhood insulation to prevent putting holes in the insulation during this step.

### Step 12:

Attach billet plates using supplied screws. Snugly tighten. **Do not over-tighten as it will cause hood damage!**

### Step 13:

Drill hole between the two spot welds on core support to attach lanyard to.

**Note:** We recommend riveting the lanyard with a washer. (see figure 13a)

### Step 14:

Route lanyards around hood pin bracket to come out the corners of the grille.

### Step 15:

Cut holes in radiator cover with template or purchase one already modified (Part #5R3Z-8C291-AAA). Re-install cover and then grille.

To place an order, or for current pricing, call your authorized Scott Drake dealer.

For a list of dealers in your area, or for any other questions about Scott Drake products, visit [www.scottdrake.com](http://www.scottdrake.com) or call our customer service department toll free:

**1.800.999.0289**

Mon-Thurs 7:00 a.m. to 5:00 p.m.  
Friday 7:00 a.m. to 4:30 p.m. - PST




130 Cassia Way  
Henderson, NV 89014  
t: 702.853.2060  
f: 702.853.2062


## SATISFACTION GUARANTEE:

If you are not happy with this product for any reason or found product to be defective in manufacturing, simply return it to Scott Drake Enterprises, Inc. within 30 days of purchase and we will replace it - no questions asked. We stand behind our products one hundred percent, so you can sit behind the wheel with pride.


*\* Please call Scott Drake Customer Service for a Return Authorization (RA) before returning any product. Proof of purchase and dated receipt must be present with any return. All returned products are tested and if found to be damaged by the installer, no replacement will be issued. You pay the cost to ship to us, we pay for the return shipping. Guarantee does not include any labor and/or tax charges incurred.*

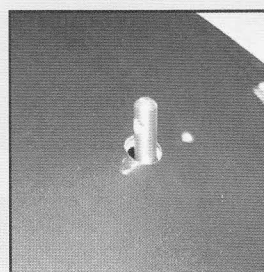


Step 7

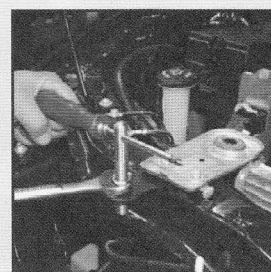


Step 8

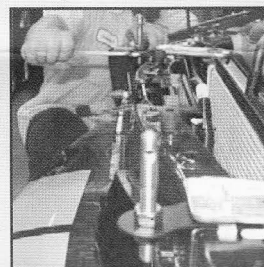


Step 9a

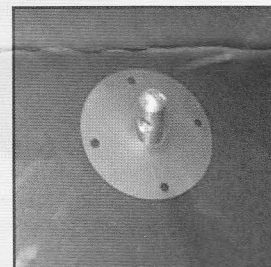


Step 9

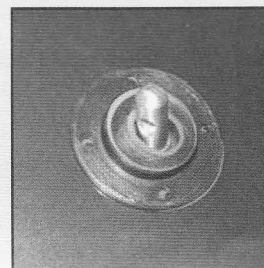


Step 9a

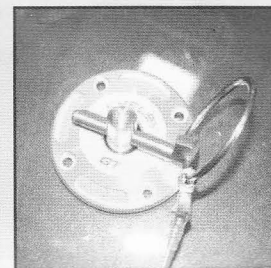


Step 10

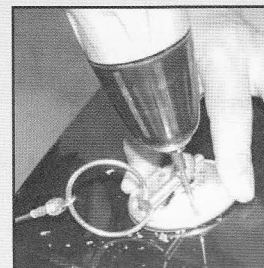


Step 11

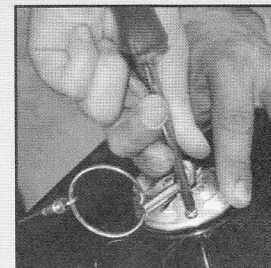


Step 12

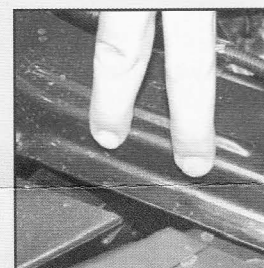


Step 13

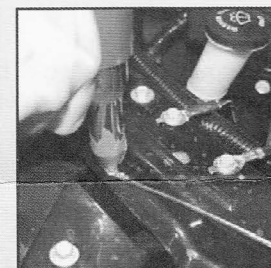

Step 13a

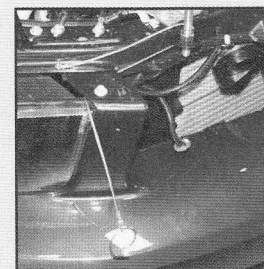


Step 14

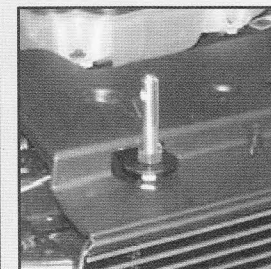

Step 15

## HOOD PIN BRACKET TEMPLATE

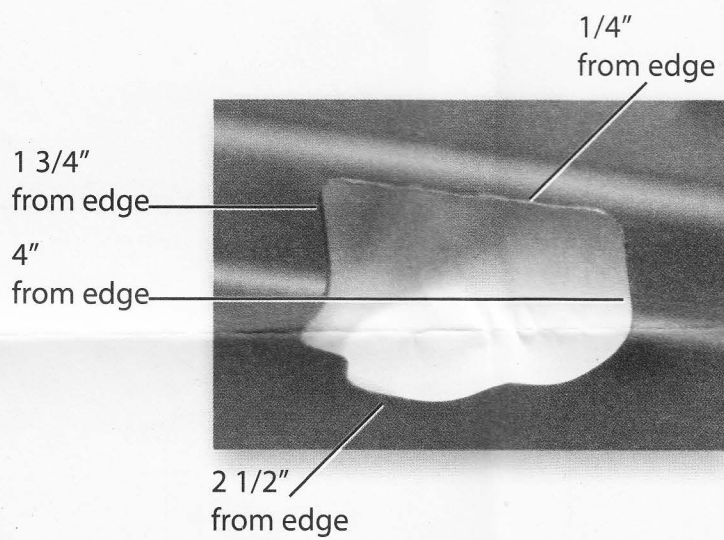

Right/Left Template Included

