

## Installation Instructions for Upper Overlay Grille (05-09 V6 Mustang)

### Tools Required:

Phillips Head Screwdriver  
Flat Head Screwdriver

### Step 1:

Remove the 6 plastic retaining clips holding the upper plastic radiator cover to the radiator support and remove it from the vehicle.



### Step 2:

Remove the grille by prying gently on the bumper cover tabs holding the grille and pulling outwards as shown.



### Step 3: \*\*\*For Pony Delete Grilles Only\*\*\*


If installing a Pony Delete grille, you may want to hide the appearance of the Pony Emblem, there are two ways to go about this: (1) Using a flat head screwdriver or trim removal tool, pry off the retaining nuts and remove the pony emblem from the grille; (2) Use satin black paint

of your choice to coat the Pony Emblem and make it less noticeable from behind the grille.



### Step 4:

Use the supplied machine screws, U-Tabs, and machine nuts to attach the billet grille to your factory grille. Make sure the long machine screws are used on the bottom as shown.

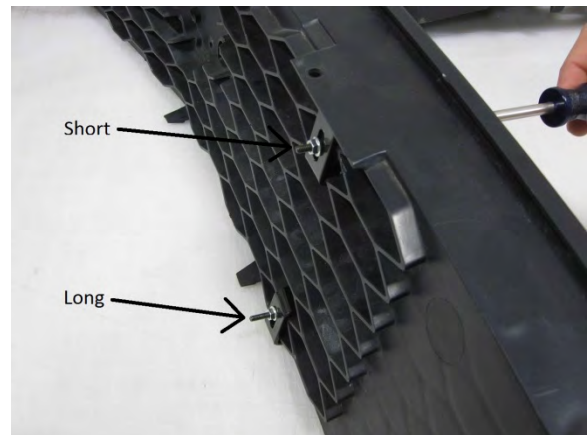

### Step 5:

Once the grille is secure and properly aligned, re-install the factory grille into the front bumper cover and replace the radiator shroud to complete the installation.

## Installation Instructions for Lower Billet Grilles (05-09 Mustang)

### Tools Needed:

Phillips Head Screwdriver  
5.5 mm Wrench or Socket

### Step 1:

Safely raise the front end of the car to gain access to the plastic drip pan located behind the front bumper. Remove the seven 5.5 mm screws securing the pan and remove it from the vehicle.



### Step 2:

Use the (2) U-brackets on the outer mounting locations. Use the (2) J-brackets on the inner mounting locations.



### Step 4:

Place the billet grille over the factory grille. From underneath the car, adjust the J-Hooks to wrap around the factory plastic grille as shown. Use a Phillips head screw driver to hold the screws in place while you thread the bracket, washer, and nut on the back side of the screw.



### Step 5:

Once all of the hooks are secured around the factory bumper, use a Phillips head screwdriver and a deep socket to hold the nut and tighten the screw.



### Step 6:

After making sure grille is properly aligned and secured, re-install the factory drip pan that was removed in Step 1 to complete the installation.