



1501 Industrial Way North, Toms River, NJ 08755
 Phone: (732) 349-2109 • Fax: (732) 244-0867

PART #M31022/M31023

2011 Mustang GT, Axle-Back Exhaust

PACKING LIST

Before installation, use this checklist to make sure all necessary parts have been included.

ITEM	QTY	CHECK	PART NUMBER	DESCRIPTION
1.	1	<input type="checkbox"/>	310034787	Muffler Assembly, DS, '11 Mustang
	Or 1	<input type="checkbox"/>	310803787	Tail Pipe, Rear, DS, '11 Mustang
2.	1	<input type="checkbox"/>	310034788	Muffler Assembly, PS, '11 Mustang
	Or 1	<input type="checkbox"/>	310803788	Tail Pipe, Rear, PS, '11 Mustang
3.	1	<input type="checkbox"/>	315012787	Muffler adapter pipe assy, DS, '11 Mustang
	Or -	-	-	N/A
4.	1	<input type="checkbox"/>	315012788	Muffler adapter pipe assy, PS, '11 Mustang
	Or -	-	-	N/A
5.	2	<input type="checkbox"/>	310305787	Tip, 4" OD, 3" Inlet, Polished, Slash Cut Dual Wall
6.	4	<input type="checkbox"/>	308940020	Clamps, Torca, 3"
	Or 2	<input type="checkbox"/>	308940020	Clamps, Torca, 3"
7.	2	<input type="checkbox"/>	308305001	Clamp, Bell/Band, 3"
8.	1	<input type="checkbox"/>	INSTR	Instructions

WARNING: SLP Recommends allowing the vehicle to cool (not running) for five hours before beginning installation.

INSTALLATION INSTRUCTIONS – # M31022/M31023

1. Raise and fully support the vehicle (a vehicle lift is recommended). If you do not have access to a lift, you may raise the rear using a jack/jackstands or by using drive-up type ramps.
2. Loosen the 2 factory bell/band clamps near the rear axle and remove the factory exhaust system. You may remove the factory rubber isolators but will be reusing them. A few sprays of WD-40 on the isolators makes removal and installation easier.
3. Take a piece of wood about an inch thick and place it between the factory over-axle pipe and the upper panhard bar on each side to allow for adequate clearance when installing the axleback.
4. *If installing a powerflo system proceed with step 4a. If not, proceed to step 5.
 - a. place the Muffler Adapter Pipe with a 3” Torca Clamp onto into the muffler assembly. Snug the clamp but do not fully tighten. Repeat for other side.
5. Place the factory hangers back onto the axleback hangers. Repeat for other side.
6. Place a bell/band clamp over the ball flange on the system and raise into place. Insert the isolators onto the hangers on the vehicle. Repeat for other side. See figure 1.

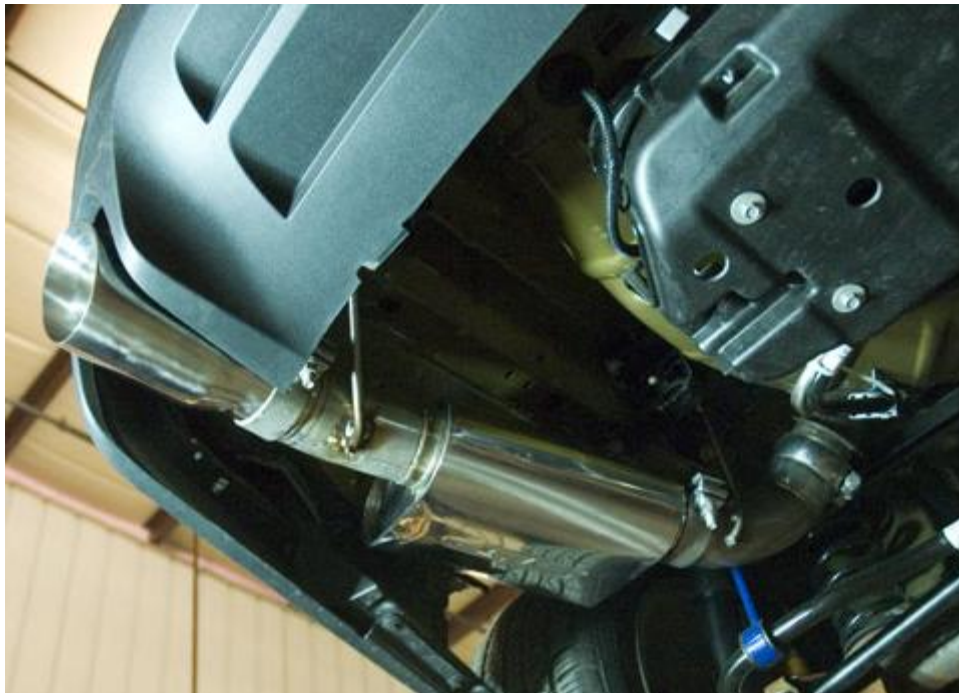


Figure 1: Installation of DS Muffler Assembly

7. Place a torca clamp onto the exhaust tip and slide onto muffler assembly/ rear tailpipe. Snug clamp but to not fully tighten. Repeat for other side.

8. Adjust system from front to back to allow for adequate clearance all around and tighten all clamps.
9. Test drive vehicle and inspect for any leaks.
10. The finished installation should look like Figure 2.



Figure 2: Finished Installation

11. The installation is now complete. Enjoy!