

# Installation Instructions


**2011 Mustang V6 3.7L, 2 ½" axle back system**

May also be installed with other brands of headers by fabricating adapter pipes.

## 3711SR5



Please check Parts List below  
to insure that all parts  
are included in the product box !

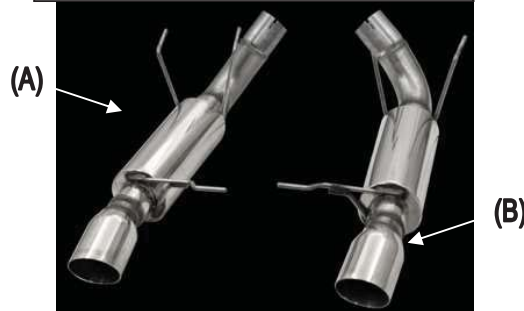

**Note:** anti-seize should be applied to all fastener threads, pipe slip joints and mating surfaces of ball /socket connections.

### Parts List and Description

(A)	3711R5DM -driver side muffler assembly with slip adaptor
(B)	3711R5PM -passenger side muffler assembly with slip adaptor

### Hardware List

1	-anti-seize compound
2	-2 ½" clamps

### **Installation instructions:**

- 1.) Raise and support vehicle.
- 2.) Remove mufflers from vehicle at the connection behind the differential. The factory ball and socket clamps are to be re-used in this installation. The spot welded tab that holds the clamp in place will have to be broken to remove the clamp. Be careful not to damage the clamp.
- 3.) Slide the clamps over the inlet adaptor of the Bassani muffler and fit mufflers to stock hangers with a little WD-40 to assist sliding in the rubber.
- 4.) Fit clamps in place and snug fit. Align tips within cut-out in rear lower valance. Left and Right adjustments can be made by rolling muffler at the ball and socket connection. In and Out adjustments can be made by loosening slip connectors behind the factory crossover pipe.
- 5.) Once Alignment is done tighten all clamps.

**FOR TECHNICAL ASSISTANCE CALL TOLL-FREE (866) 782-3283**  
**2900 East La Jolla Anaheim, CA 92806**