

FORD ROOF RAIL WEATHERSTRIP - LEFT AND RIGHT SIDE (05-14 ALL)

Time Necessary: Approximately 1 hour

Tools Required:

- Fastener Removal Tool
(Optional)

Please Note: AmericanMuscle supplies new gasket with pushpins.
Do not reuse old pushpins.

Removal Procedure:


1. Open door.
2. (2) pushpins are located on each end of gasket.
Remove and discard.



3. Gently separate front and rear molding from lower doorframe.



4. Remove old gasket by pinching gasket together and pulling away from vehicle.

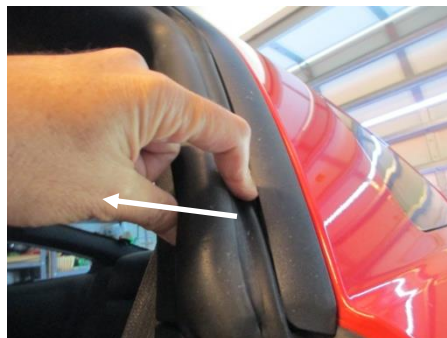

Installation Procedure:

1. Align new gasket with corner pushpin.




2. Press new gasket into channel and inside interior roof molding.



3. Insert pushpins on each end.



4. Replace front and rear door molding.

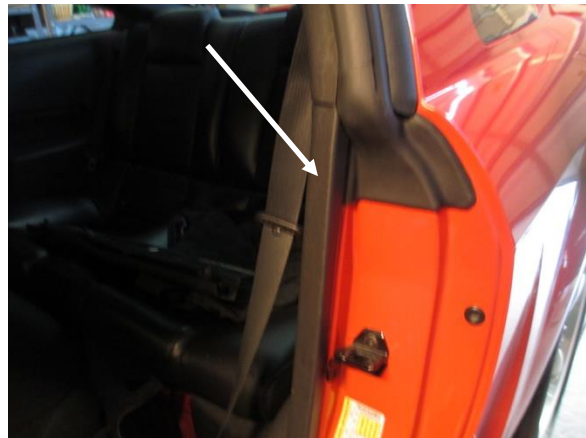

5. Exercise window, ensuring alignment.



Installation Instructions written by AmericanMuscle customer Mark Ockuly 11/11/15