

SR Performance Strut Tower Brace (05-10 GT; V6)

Tools Required:

- 3/8 Ratchet
- 3/8 Torque Wrench
- 13 mm Socket



Included:

- 1 - SR Performance Strut Tower Brace



Installation Instructions:


1. Remove the inner nuts of the strut tower mounts for both the right and left side

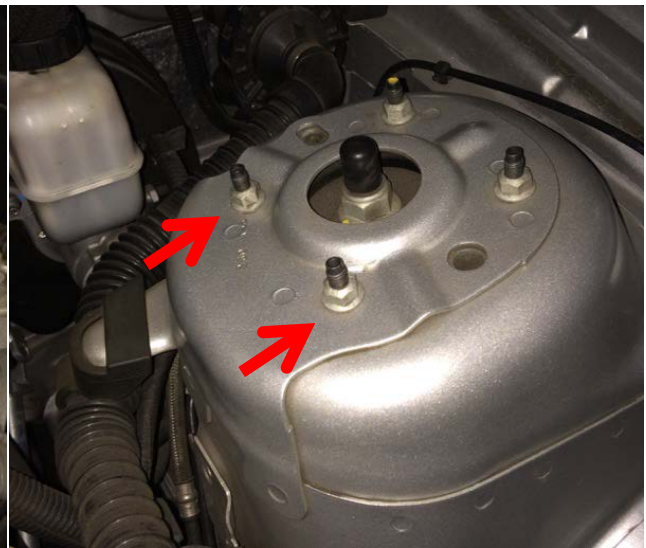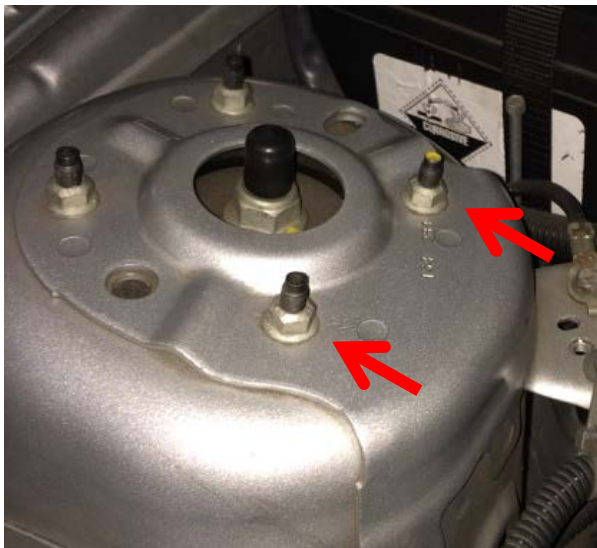

2. Once you remove all four nuts, put the strut tower brace in place, over the strut mount studs, assuring the angled brackets sit flush over the strut mounts (**Note:** If the brace is not sitting flush and angled over the mount, then the brace is sitting backwards)



3. Screw the nuts back over the brace's bracket; assure they are snug as you will be torquing them down. Using the torque wrench, torque the screws to 26 ft/lb

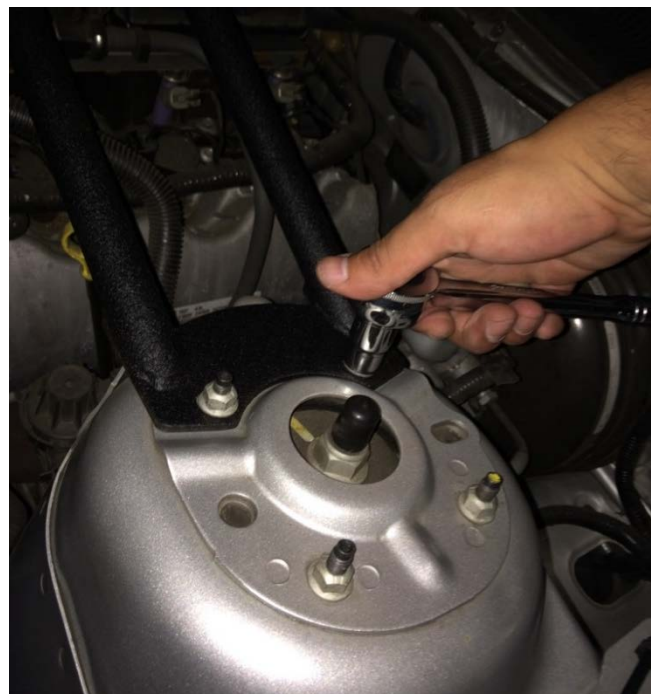

4. Enjoy!



Installation Instructions written by AmericanMuscle Customer Daniel Garcia 11.02.2014