

AMERICAN MUSCLE GRAPHICS



Tools Required:

Spray bottle with soap & water mixture

Plastic Squeegee

Step 2:

Peel backing from insert exposing the adhesive. Also spray back of decal as your peeling the backing paper off.



Step 3:

Place the decal on the car. You will be able to maneuver it into position because of the soap and water solution you sprayed on earlier. If it doesn't slide enough peel back and spray on more solution.

Step 4:


Squeegee out the water from underneath the decal with a squeegee (*covered in a cloth that will not scratch the vinyl and keep the vinyl wet*). The rear of the decal should be about 1/10th from the edge of the body panel.



1/10th of an inch


Step 3:

Get the vinyl on the back towards the door to a point where it is dry and won't move when gently moving the rest of the decal (about from the center of the wheel forward). You can then start to smooth the front half. The goal is to have about 1/10th of an inch at the front part of the hood above the headlight. The part going toward the bumper should go over the hood to be wrapped. Once this section of decal is dry and lined up, wrap the front around the hood.

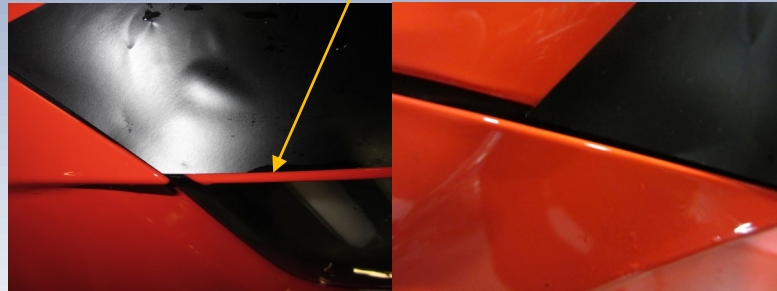

Step 4:

Next place the front piece on the bumper overlapping it over the large section you just installed. Lapping it over the first section allows you to line up this section's width with the first section to assure alignment when installed with the hood gap. You then tuck the vinyl down and behind the weather-stripping. It may be easier if the piece was dry on the bumper first, do this use a hair dryer.

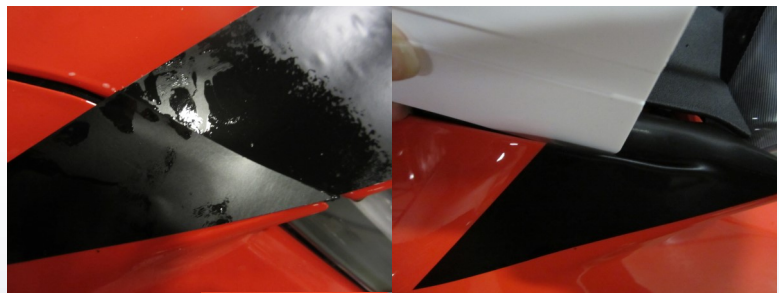

Leave several hours, depending on climate, of dry time before cleaning car. Use a quick detailer in a spray bottle for the initial cleaning then hand wash car waiting at least several days for the first time after drying. ***Do not power wash vinyl or wax vinyl.***

In these instructions a hood is pictured but the process is similar for other products