

Installation Instructions for a Ford Strut Tower Brace – Silver (15-17 GT)

Installation Time: 15-30 minutes

Tools Required:

- ✓ Torque wrench
- ✓ 15mm deep socket
- ✓ 3/8" ratchet

Notes: You will need to purchase 4 strut tower nuts to complete this installation.





Step 1: Place your new strut tower into place using the strut posts as a guide (Red Arrows)





Step 2: Thread on 2 strut tower nuts on each side and torque to 41ft/lbs

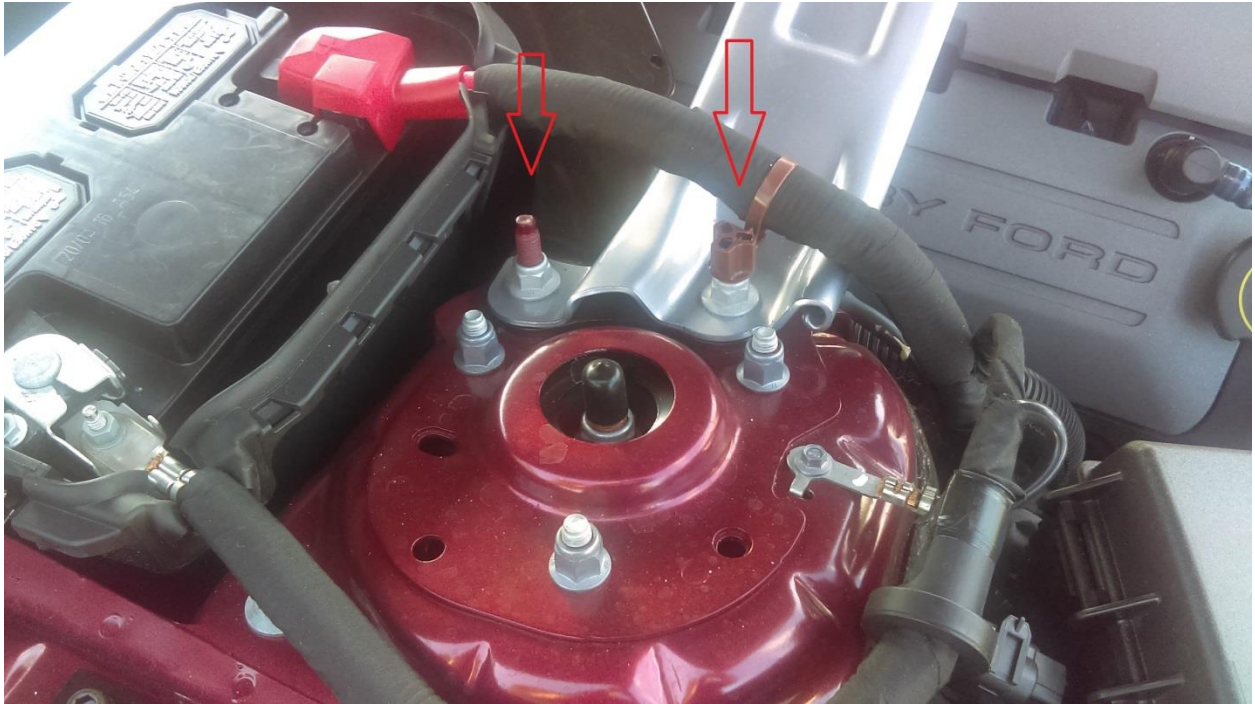

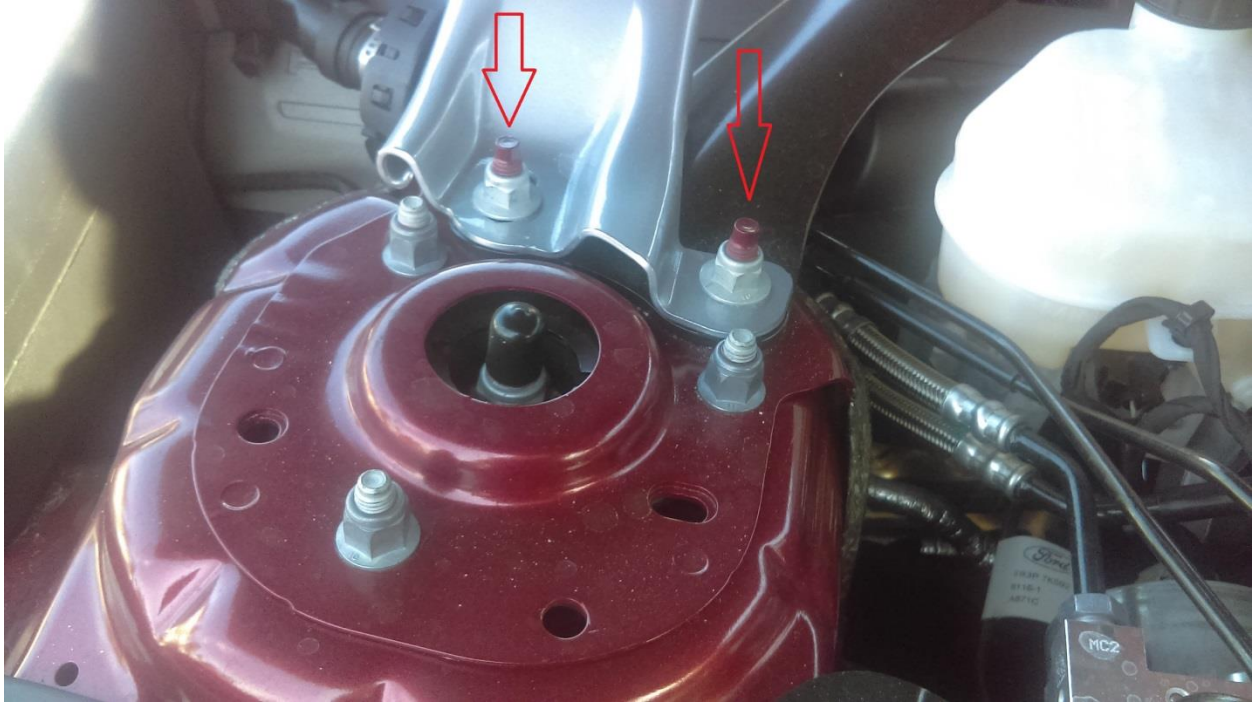

Before/After:





Installation Instructions Created and Submitted by AmericanMuscle customer, James B. – September 15, 2016. Work completed on “Dorothy” his ’16 Mustang GT w/PP