

## **2015 Mustang RTR Rear Spoiler Installation Instructions**

### **Kit Components:**


- 1 - RTR Rear Spoiler
- 1 - Drill Template

### **Tools & Materials Required:**

- Ratchet and 10mm Socket
- Soft Panel Removal Tool / Flat Screw Driver
- Drill & Drill Bits

### Step 1:

Open the trunk and remove the (2) rubber grommets.

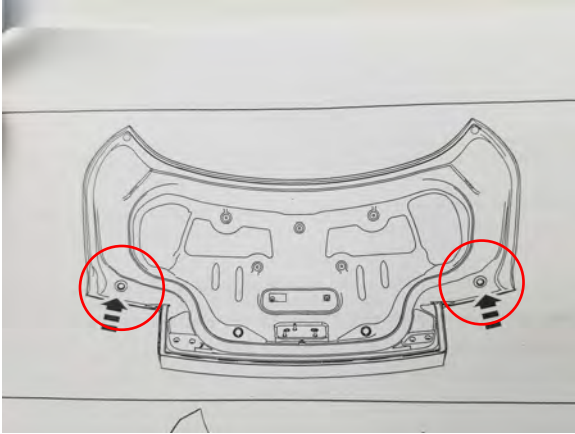

### Step 2:

Close the trunk and align the supplied template with the front and sides of the deck lid.



### Step 3:

Using the aligned template, mark and drill 1/8\"/>A close-up photograph of a drill bit being used to drill a hole into the yellow surface of the trunk lid. The drill bit is a standard double-flute bit, and a small hole has just been drilled into the metal.

### Step 4:

Remove the template and blow off any metal shavings, careful not to scratch the paint. \*\*Note: Apply touch-up paint to any exposed metal to prevent any future oxidation.



### Step 5:

Wipe the tape surfaces on the deck lid panel with the provided alcohol wipes. Then test fit the spoiler to confirm fitment.



**Step 6:**

Remove the tape backing and apply the supplied adhesion promoter. Allow time for the adhesion promoter to flash dry.

**Step 7:**

Place the spoiler on the car. Apply firm even pressure to the tape surfaces to ensure proper adhesion. Tighten the supplied nuts to 41 lb-in. Re-install the (2) rubber grommets removed in step 1.

