




2015 Chin Spoiler

REQUIRED Socket Set Drill and Bits
Flat Screw Driver Panel Removal Tool

**NOTE:

The bumper does not need to be removed from the vehicle for installation.

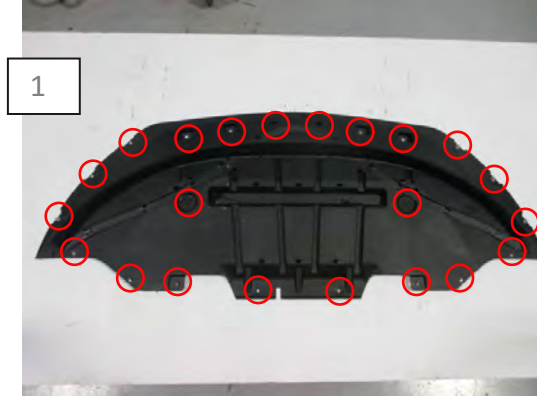

1
Support the front of the car so you can access the bumper splash shield. **Note there are two versions of the splash shield (Track Pack and Non Track Pack). Both are attached to similar locations



2
Remove the fasteners holding the chin spoiler to the bumper. Base and Performance pack cars are secured using similar hardware.



3
Remove the screw clip from the factory chin spoiler.



4
Install the screw clip on the bumper cover as seen above.



Install the Foose chin spoiler using the factory hardware. Non Track Pack splash shields follow step 6. Track Pack splash shields follow 7-10.

Non Track Pack Splash Shield 6




Non-Track Pack Cars, Reinstall the splash shield using the factory holes. Secure the outer splash shield to the Foose lip using these holes on both sides.


Track Pack Splash Shield 7-10



Remove the chin spoiler brace from the chin spoiler by drilling out the rivet. **Note: This will NOT be riveted to the Foose chin spoiler.

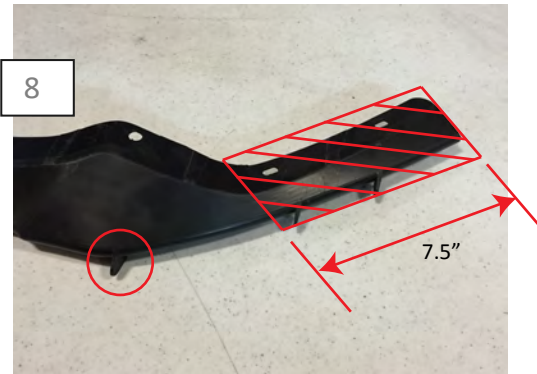

Measure 7.5" from the end of the chin spoiler brace and cut a straight line. Remove the plastic nipple from the brace circled above. **Note: Performance Pack cars only.

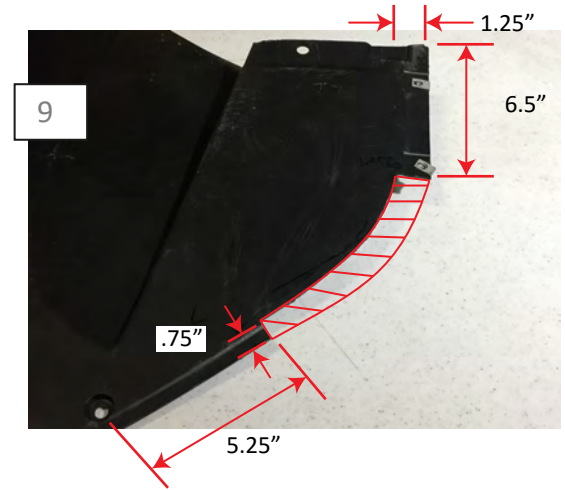

Trim the splash shield to fit the Foose chin.



Reinstall the chin spoiler brace and splash shield using factory hardware. The outer edge of the splash shield will only be secured to the Foose chin spoiler using the hole circled above.