

FOOSE  
—by—  
MMD

## 10-14 Side Scoop

REQUIRED 2 - Alcohol Wipes  
2 - Adhesion Promoter

2 - Inserts  
1 - Tape Kit

1



Wipe the tape ledges on the scoop and paint surface where the scoop will mount with the provided alcohol wipes followed by adhesion promoter. \*\*Note: A clean surface is essential for proper adhesion.

2



Apply the Supplied tape as seen above.

3




Remove the tape backing from the insert and install the insert to the side scoop.

4



Fit the part before removing tape backing.  
\*\*Note: While sliding the scoop up and down, you will notice where the scoop fits the best on the body line.

5

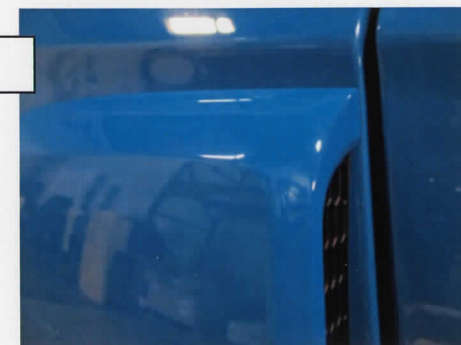

While holding the bottom against the body line, line up the top of the scoop just behind the door edge.