



1999-2004 Duck Tail Spoiler

Tools Required:

10mm Deep Socket
Ratchet
Trim Removal Tool
Phillips Head Screw Driver

Contents:

- (1) - Cobra Style Spoiler
- (2) - Mounting hardware
- (1) - Tape Kit
- (4) - Alcohol Prep Pads
- (2) - 3M Adhesion Promoter Pads
- (2) - Fill Plugs



Be sure to use the alcohol prep pads and 3M adhesion promoter pads as instructed.


Use caution centering the spoiler once the red backing is removed, the 3M tape can be very sticky

Step 1 // Open Trunk and locate the factory spoiler mounting bolts.

-99-00 Remove the outer 2 nuts on either side

-01-04 remove the inner 2 nuts on either side

Then Remove the Factory spoiler

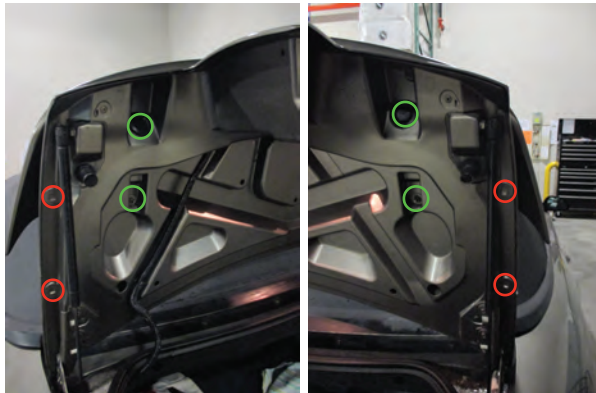

Step 2 // Thoroughly Clean both painted surfaces to remove dirt, grease, and wax. Prep the new Spoiler with the alcohol prep, and then the 3M Adhesion Promoter



Step 3 // Apply the supplied tape to the corresponding red outlined areas below



Step 4 // Remove the 3M red backing tape. Center the spoiler so that the bolt holes line up correctly.



Step 5 // Center the spoiler so that the bolt holes line up correctly. Install with the supplied hardware.

Note: 99-00 will only use the 3M tape to secure the spoiler to the deck lid.

01-04 will use the rearward most mounting holes



Step 6 // Remove the red backing from the plugs and firmly press them into any exposed holes.

Note:

99-00 will 6

01-04 will use 2





INSTALLATION GUIDE:

99-04 Duck Tail Spoiler

Item # 388987