

13-14 MMD Chin Spoiler

REQUIRED Alcohol Wipes
Adhesion Promoter

7mm Socket
Ratchet




1

Start by removing the factory lip. ****Note:** supporting the front of the car with jack stands is not necessary but it can be helpful.



2

You will reuse the center hardware along with the wheel well hardware to attach the MMD Chin Spoiler.

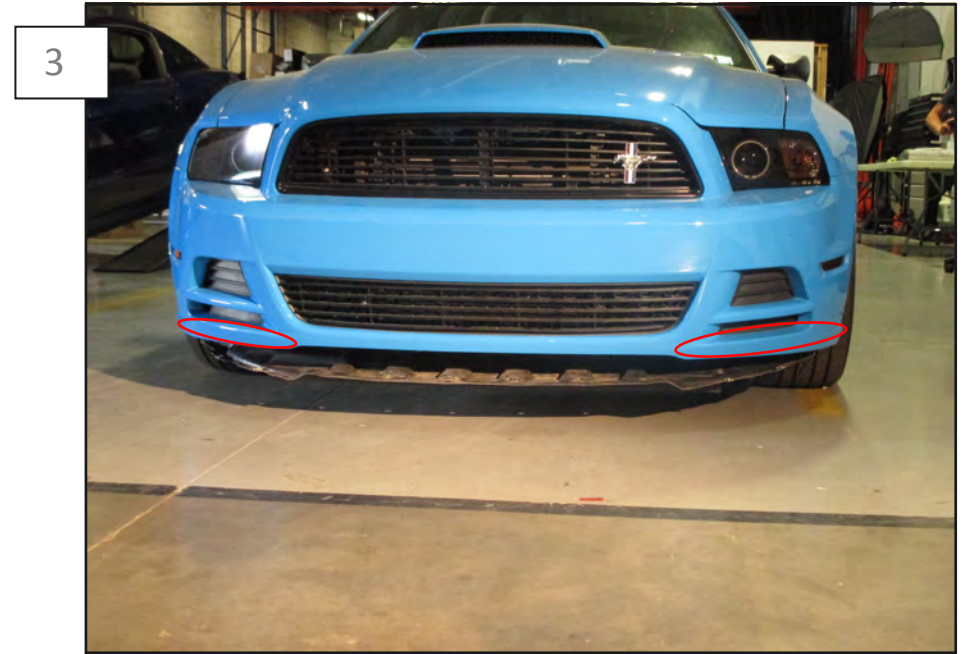

3

Prep the bumper with alcohol wipes where the tape on the lip will contact the paint. Use the adhesion promoter on the exposed tape surface.



4

Attach the MMD chin spoiler with the factory hardware. Center the lip. Then apply firm pressure to tape surfaces. ****Note:** the factory splash shield mounts under the chin spoiler. If it is mounted between the chin and the bumper you will create a gap.