

315 Old Ferguson Road, Huntsville, ON. P1H 2J2 Phone (705) 788-2845 Fax (705) 788-3773 <u>www.mbrp.com</u>

Thank you for purchasing a quality MBRP Inc. Performance exhaust product.

This exhaust system has been designed, tested and built here at MBRP Inc. It was produced to give years of trouble-free service as well as the added performance you have come to expect from MBRP Inc. All exhaust systems pass through our quality control personnel before packaging. Your system has been packaged and is completely ready to install upon receipt. Thank you for choosing MBRP Inc.

IMPORTANT: Installation of this product indicates that the buyer has read, understands and accepts the terms of the product warranty and

liability disclaimer. MBRP Inc., its distributors, jobbers, and dealers will in no way be responsible for the products proper use and service. The buyer hereby waives all liability claims.

The seller assumes no liability regarding the improper installation or misapplication of its products. It is the installer

responsibility to check for proper installation and if in doubt contact MBRP-Inc. Under no circumstances will the seller be liable for any damage or expense incurred in diagnosis for defects, removal, or reinstallation of this product or any other contingent expenses.

Please ensure that you have received all components as described / listed in the instructions provided. If any components are missing, it must be reported to the point of purchase within 24 hours of receipt of this merchandise. All damaged merchandise must be reported to the carrier immediately, within 24 hours upon receipt of the goods. You will be required to provide a claim report to the carrier prior to contacting your account manager within two days. MBRP Inc. will not be responsible for any claims after three days of receipt of goods.

Caution !! Never work on a hot exhaust system. Serious injury or burns can result from working with a hot exhaust system. Please allow the appropriate cooling time before beginning installation. MBRP Inc. recommends that all exhaust systems and accessories be installed by a trained automotive technician. Please use the appropriate tools, equipment, eye protection and safety measures. Take all necessary precautions to ensure a safe installation.

All warranty claims are to be handled directly with the manufacturer. Included with your MBRP Inc. performance exhaust is a warranty card. Please read it carefully before you begin installation. If you have not received a warranty card with your purchase please call 1-888-636-7223. If you have any questions or concerns regarding the warranty of this product, please call

MBRP Inc. reserves the right to change or update these policies at any time.

and speak with one of our customer support representatives before installation of exhaust system.


In the event that the buyer does not agree with the terms listed above, the buyer may return the product in a new and unused condition, with a dated proof of purchase, to the original point of purchase within ten (10) days from the date of purchase for a refund.

The installation of this product indicates that the buyer has read and understands this agreement and

The installation of this product indicates that the buyer has read and understands this agreement and accepts its terms and conditions.

S7277 2015 MUSTANG GT CAT BACK STREET



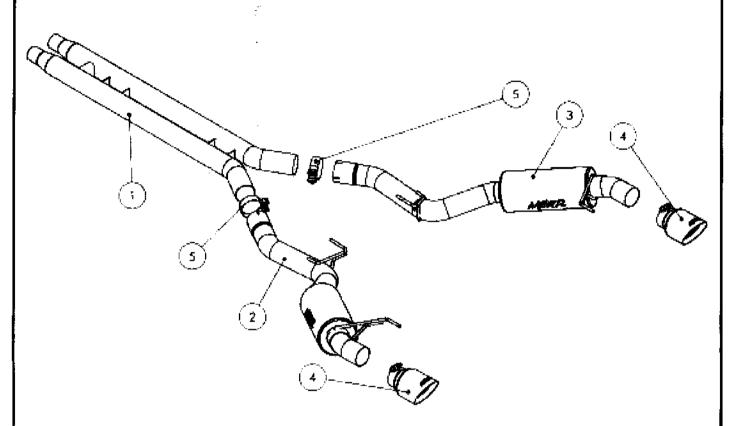

- H PIPE 1.
- 2. DRIVER SIDE MUFFLER ASSEMBLY
- 3. PASSENGER SIDE MUFFLER ASSEMBLY
- 4.
- TIP [2 PCS] 3" CLAMP [2 PCS]

PLEASE READ BEFORE STARTING INSTALLATION

While MBRP Inc. has made every effort to ensure that all components of this system are of superior quality and properly packaged, it is the installer's responsibility to ensure the following before removal of the factory exhaust:

- that ALL components shown above are present.
- that ALL mating components fit together.
- that there are no damaged components.
- that the system you have purchased is appropriate for your vehicle year, model and configuration.
- that the system will not interfere with any modifications previously installed or planned.
- that you have read and understand these instructions.

If you have any questions or are uncertain about any aspect of the installation of this system to your vehicle please contact your dealer before commencing installation.

\$7277 @ D1/15


PAGE 1 OF 3



Removal of Stock System

- 1. Apply a penetrating lubricant liberally to all exhaust fasteners, hangers and rubber insulators.
- 2. Remove the M8 bolts from the mid hanger brackets and remove them from the vehicle. Retain these parts as they will be reused.

Refer to Figure 1.



Refer to Figure 2.

- 4. Remove the OEM catback by lowering the inlet end and sliding the assembly forward to remove it from the rear hangers. Remove the OEM clamps as they will be reused.
- 5. Unbolt and remove the rear hanger brackets. Retain these parts, they will be reused.

Installation of MBRP Inc. Performance Exhaust

1. Install the previously removed clamps onto the inlets of the H Pipe and install the assembly onto the vehicle with the flat side of the pipe support brackets facing the ground. Tighten the clamps enough to allow for adjustment while ensuring the H Pipe is level as viewed from the rear of the car.

Refer to Figures 3 and 4.



Figure 1

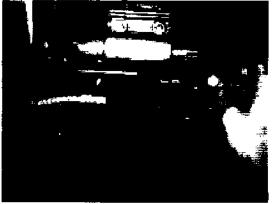


Figure 2



Figure 3

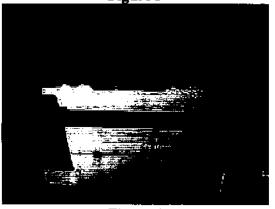


Figure 4



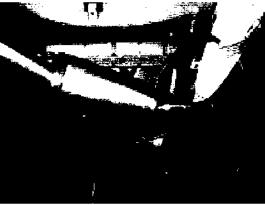


Figure 5



Figure 6



Figure 7

Install a 3" Clamp onto each of the H Pipe outlets. Install the Driver Side Muffler Assembly by pre installing the mid hanger bracket, and rear hanger bracket in the appropriate locations on the Driver Side Muffler Assembly. Install the Driver Side Muffler Assembly onto the outlet of the H Pipe then install the mid and rear hanger brackets on the vehicle. The mid and rear hanger brackets have hooks that will hold them in position on the vehicle until the M8 bolts are reinstalled. Tighten the rear hanger bracket bolts but leave the mid hanger bracket bolt loose for now.

Refer to Figures 5 and 6.

3. Install the Passenger Side Muffler Assembly using the same procedure as illustrated in step 2. Tighten both 3" Clamps just enough to allow for adjustment.

- 4. Install both **Tips** and tighten just enough to allow for adjustment. Refer to Figure 7.
- 5. Align the exhaust as required to center the **Tips** in the rear facia then tighten all clamps.

Note; The mid hanger brackets can be used to help center the tips in the Facia. Once all clamps are tight, adjust the mid hanger brackets to fine tune the placement of the Tips then tighten the M8 bolts.

6. Check along the whole length of the exhaust system to ensure that there is adequate clearance around fuel and brake lines or any wiring. If any interference is detected relocate or adjust.

Congratulations! You are ready to begin experiencing the improved performance and driving pleasure of your MBRP Inc. performance exhaust system. We know you will enjoy your purchase.