



2015 Vertical Link

Contents:

- (1) - Left Vertical Link
- (1) - Right Vertical Link

Tools Needed:

- 15mm Wrench
- 18mm Wrench
- Jack
- Jack Stands



****Important Notes:**

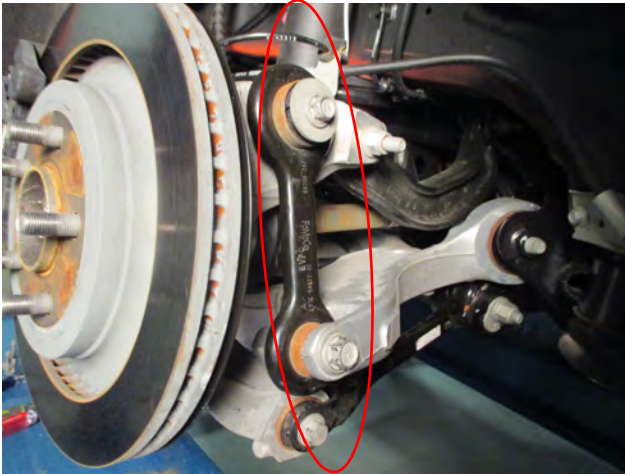
It is **HIGHLY** recommended that you get a professional alignment after installation of toe arms.

Step 1:

On a level surface, raise and support the rear of the vehicle on jack stands. Remove rear wheels.

Step 2:

Locate the rear toe link.

**Step 3:**

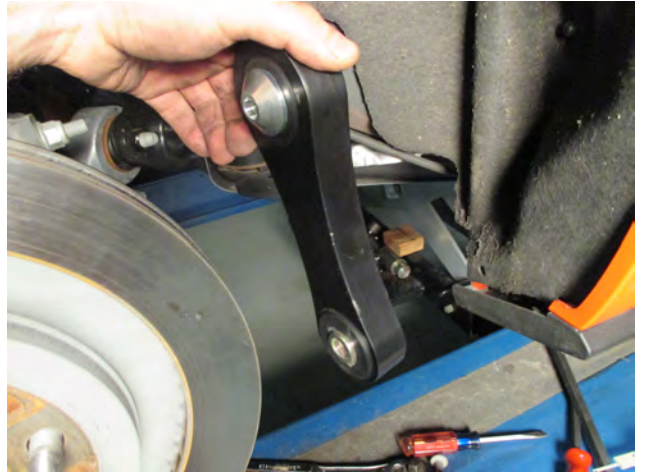
Using an 18mm wrench remove the vertical link lower bolt.

Step 4:

Using the 15mm wrench, remove the upper bolt, remove the stock vertical link.

Step 5:

Install the new vertical link. The larger end towards the top. The beveled aluminum insert faces the hub. The smaller end bolts on the bottom. **Note: The large washers are placed on either side of the lower bushing.

**Step 6:**

Attach using factory hardware. Torque to factory specifications.

