


# 2015 Rear Spoiler

**REQUIRED** Alcohol Wipes  
 Adhesion Promoter  
 Drill and Bits  
 Panel Removal Tool  
 4 - Foam Pads  
 4 - Bolts and Washers  
 4 - Drill Templates


## \*\*NOTE:

**Convertibles with stock spoilers will still require drilling.**

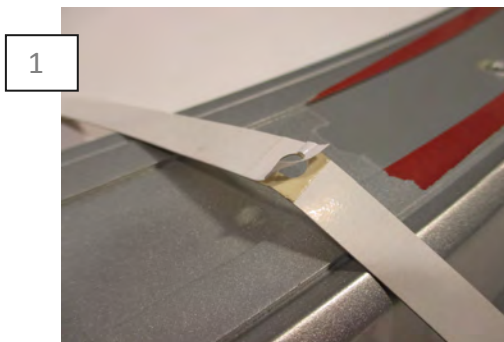


1

Using the provided drill template. Remove the center adhesive contact. Place the adhesive side on the spoiler, centering it over the bolt hole.

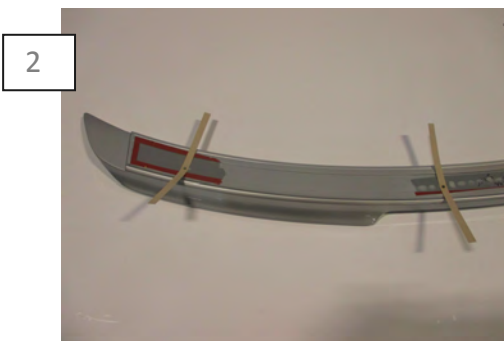


2

Center all 4 drilling templates over each of the 4 mounting points.

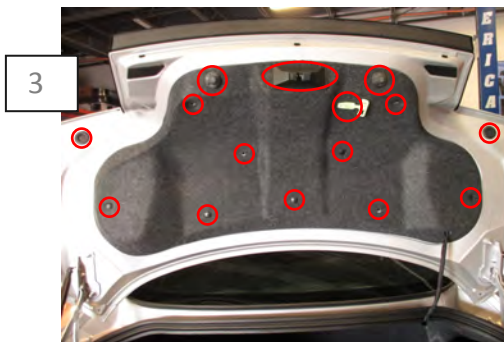


3

Remove the deck lid panel. There are various push pins, the rubber bumpers located at the top unscrew. I was able to sneak the liner off by manipulating it around the latch trim.

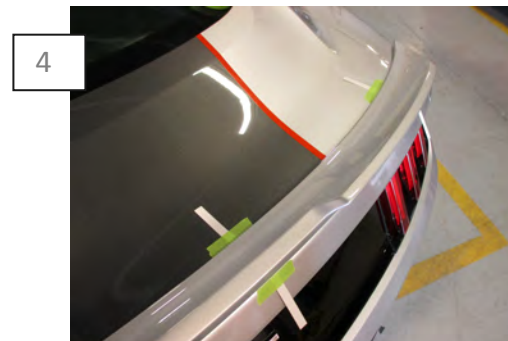


4

Test fit the spoiler and center it on the deck lid. Then tape the template to the deck lid where they lay. Carefully remove the spoiler from the templates. **\*\*Note:** this is the most important step so that the holes are drilled in the correct place.

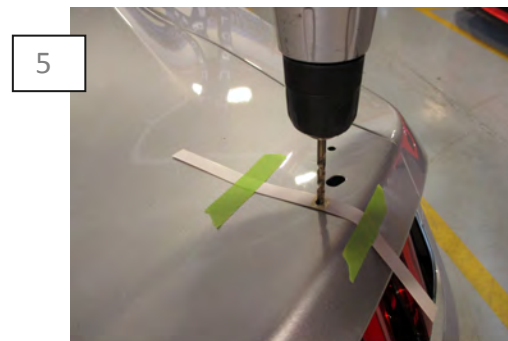

5

Once the spoiler is removed, carefully drill the center of the template holes. Finish with a 7/32's drill bit. **\*\*Note:** Use nail polish to prevent rusting.

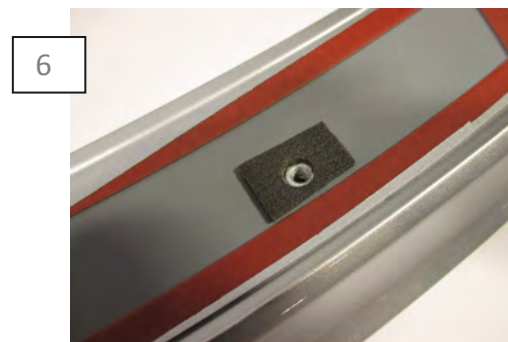

6

Place the supplied foam pads over the mounting holes on the spoiler. Trim as need. Remove tape backing and install the wing using the provided hardware.