

2015-2016 Roof Spoiler


Contents:

- (1) - Roof Spoiler
- (1) - Alcohol Prep Pad
- (1) - Adhesion Promoter




Before beginning, be sure to thoroughly clean the rear window to remove dirt and any other debris that may prevent the tape to bond properly.

1

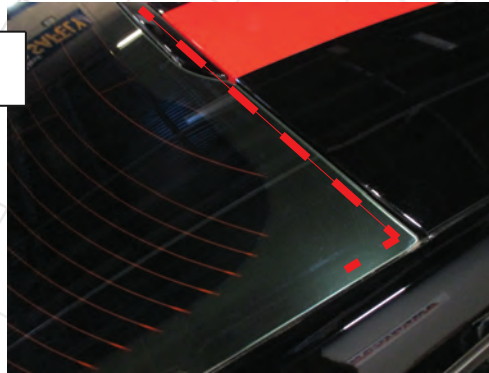

Wipe down the outer upper edge of the rear window with the supplied alcohol prep pads where the spoiler will adhere. Once dry, follow with the supplied 3M adhesion Promoter.

2b

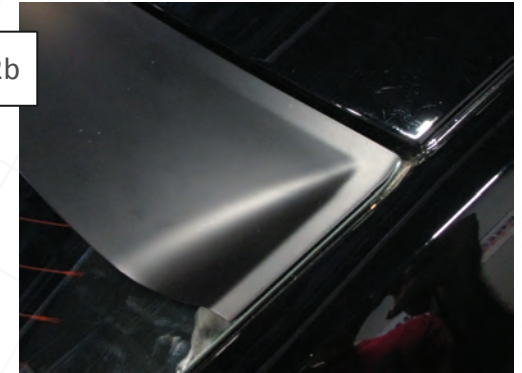

Line up the outside edge of the spoiler just inside the edge of the side and top of the glass. Once positioned apply firm even pressure over the length of the spoiler to ensure proper contact.

2b



Peel the backing from the 3M tape. With help, begin to position spoiler over the rear window.



MMD
MODULAR MUSCLE DESIGN