


INSTALLATION INSTRUCTIONS FOR A BLOWFISH SOUND TUBE DELETE KIT (11-14 GT)

INSTALLATION TIME: 30 Minutes

TOOLS REQUIRED:

- ✓ Channel lock pliers
- ✓ Socket wrench
- ✓ Socket extension
- ✓ 10mm socket
- ✓ Flat head screwdriver

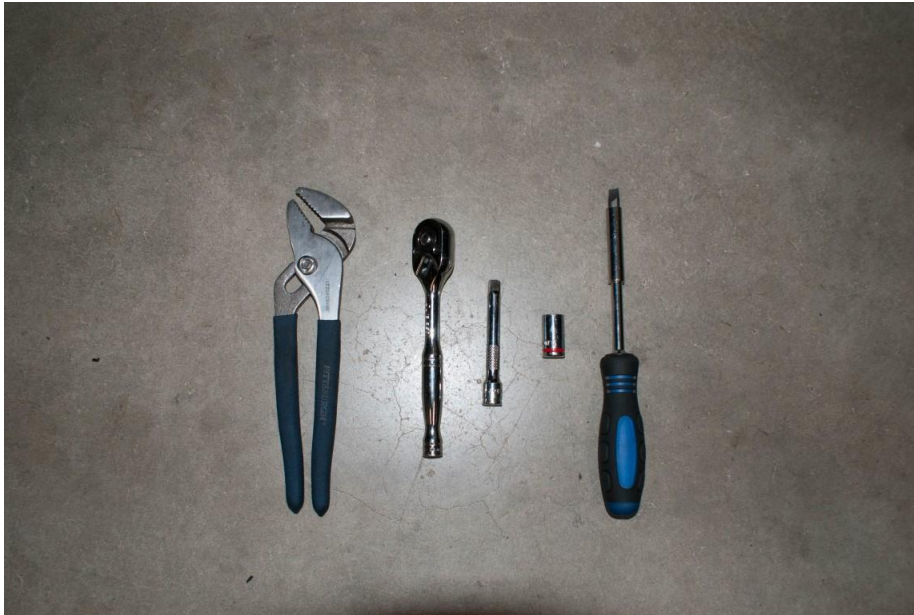

1. First pop your hood and locate the sound tube. It will be the corrugated tube coming from your intake towards the driver's side firewall.



2. Locate and remove the hose clamp holding the sound tube to your intake using the channel lock pliers.



3. Locate and remove the silver 10mm bolt holding the sound tube bracket to the shock tower



4. Pull the sound tube straight out of the firewall



5. Slide the rubber mount off the shock tower (below the shock tower brace)



6. Insert the firewall plug in the opening left by the sound tube. **Make sure it is inserted all the way around or it will fall out!**



7. Apply the silicone cap over the over the intake and tighten the supplied worm gear clamp



Optional: instead of the worm gear clamp it is possible to reuse the OEM clamp from the sound tube. I chose to do this for a cleaner install.



Finish product, no more vacuum cleaner hoses cluttering up your engine bay!



**Installation Guide Created and Submitted by AmericanMuscle Customer, Leo Haddad, on
9/10/2016**