

Installation Instructions for Raxiom Stage 1 Interior LED Lighting Kit - Cool White (15-17 All)

Installation Time: 30 minutes

Tools Required:

- ✓ Tiny flat head screwdriver
- ✓ #2 phillips screwdriver

Notes: If the bulb fails to illuminate remove and rotate 180deg, make sure the connections are tight. When doing any electrical work; always remember to disconnect the battery. If you blow a fuse during this install it is located in the passenger side kick panel position #1. It is a specialty 10a mini fuse that as of 8/11/2016 is only available from the Ford dealerships.


Map Light Install

Step 1: Reach up behind the Map light and pull down on the light housing






Step 2: Remove light bulb from the housing by depressing the clip on both sides and rock/pull it out

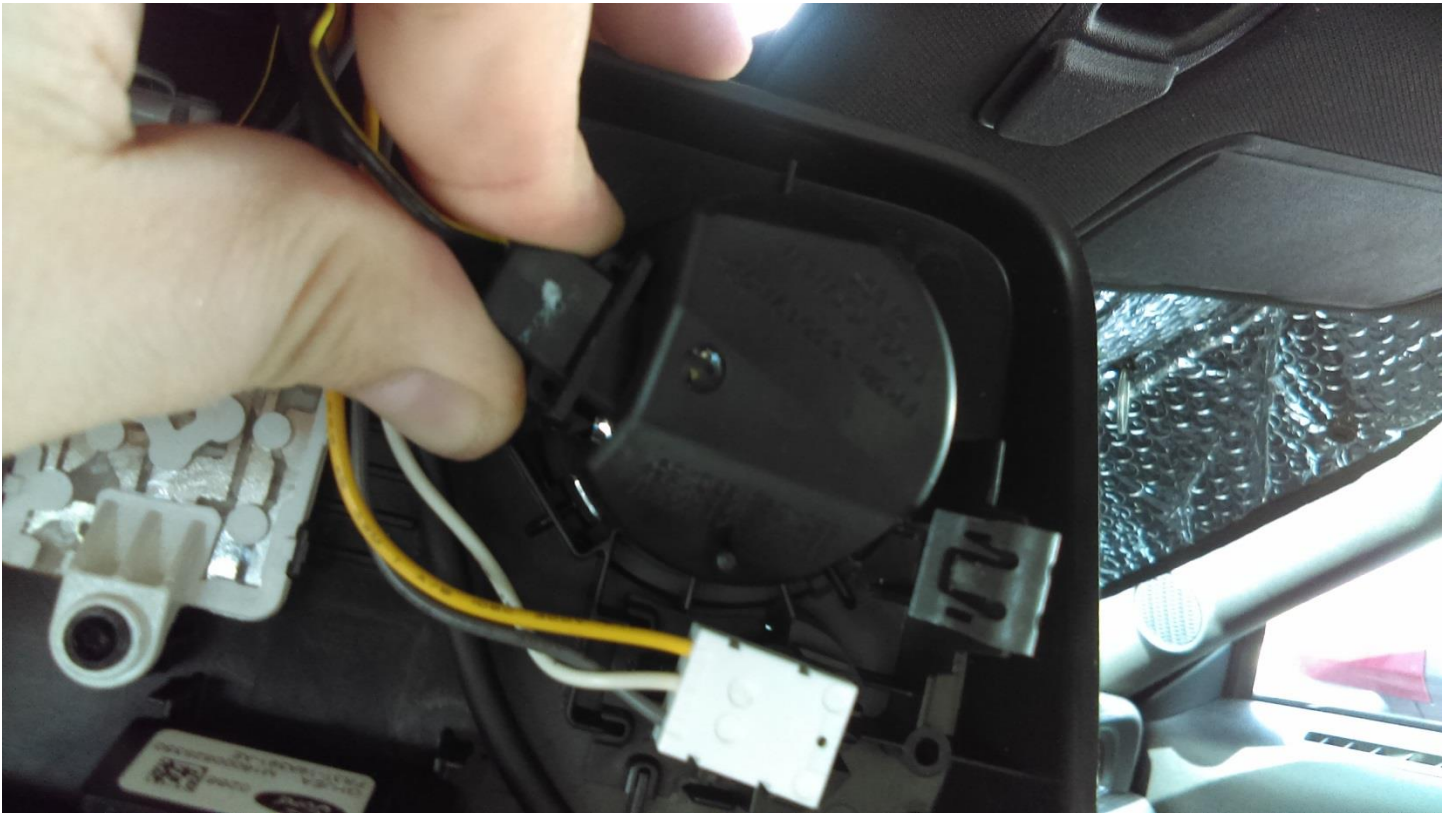

Step 3: Replace bulbs and re-install

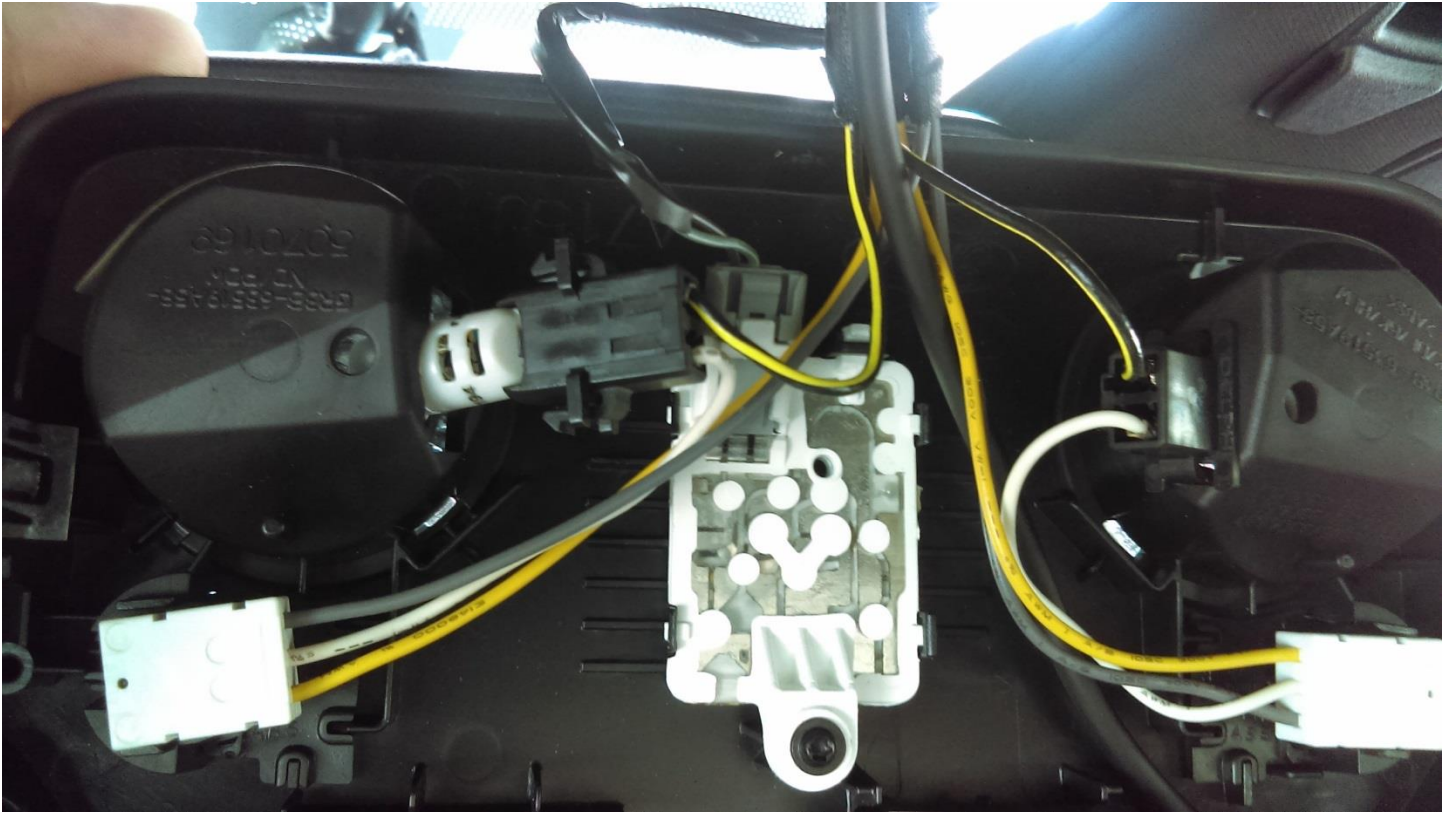

Trunk Light Install

Step 1: Locate your trunk light and pull down using a small screw driver on the LEFT SIDE



Step 2: Replace bulb and re-install



Glove Box Light Install

Step 1: Open your glove box and locate the light on the upper left side



Step 2: Reach up with 2 fingers and pull out the factory bulb and replace and you're finished!!! (Someone with small fingers would be helpful here)



Vanity Mirror Light Install

Step 1: Using a very tiny screwdriver pry the plastic covers up starting closest to the mirror on the bottom working your way up.




Step 2: Remove the two screws holding the mirror assembly in place



Step 3: Slightly close the mirror and pull down from the top rocking the assembly forward



Step 4: Replace bulb and re-install in reverse order of removal. Repeat process on passenger side.

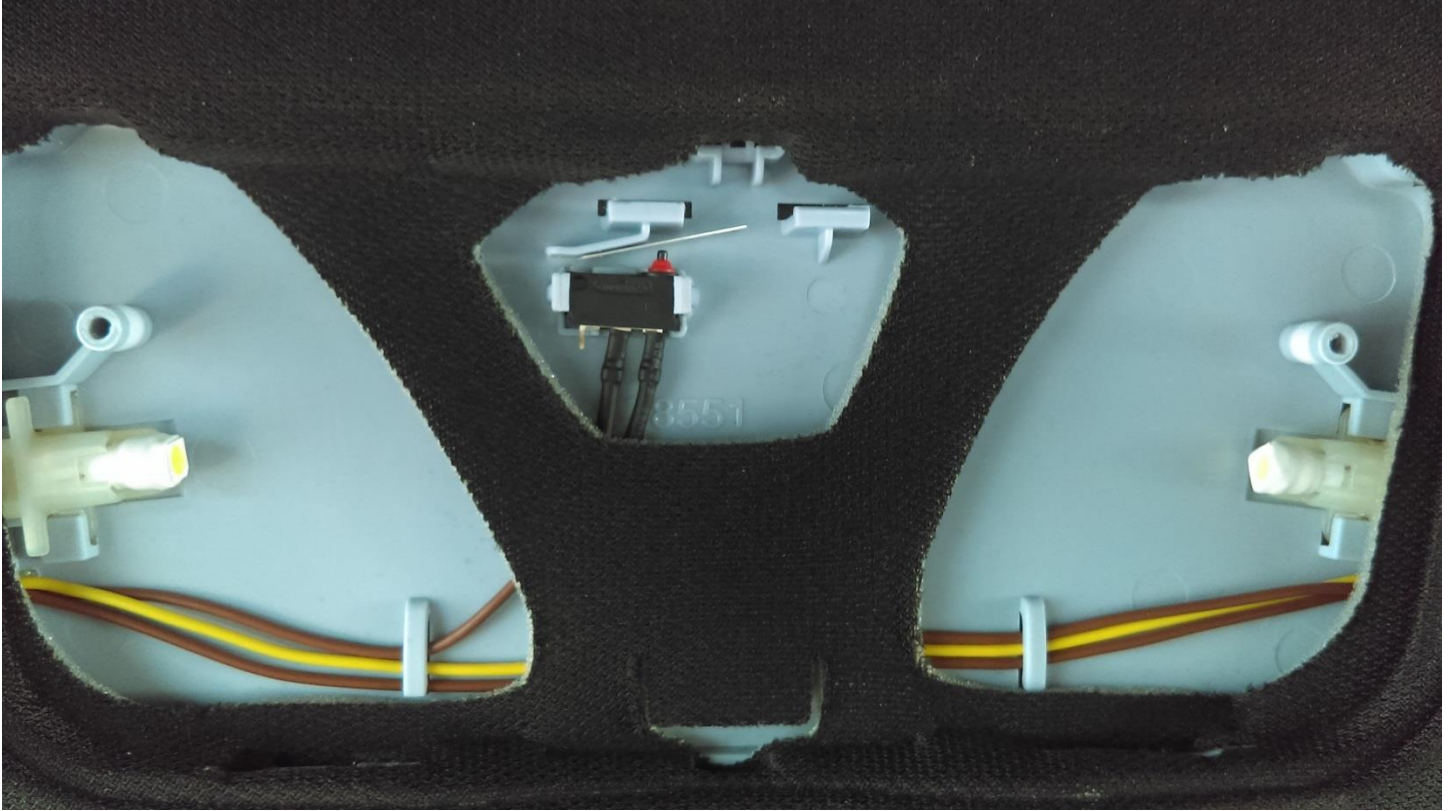

Your install is complete!



Installation Instructions Created and Submitted by AmericanMuscle customer, James B. – August 11th 2016. Work completed on “Dorothy” his '16 Mustang GT w/PP