

INSTALLATION INSTRUCTIONS FOR REDLINE TUNING HOOD QUICKLIFT PLUS SYSTEM (MUSTANG 05-14 ALL)

Installation Time: 30 Minutes

Tools Required:

- ✓ 10mm socket
- ✓ 14mm deep socket
- ✓ Ratchet



This kit contains the following parts:

- 2 - Hood brackets
- 2 - Fender brackets
- 2- Hood Struts

1.) Open the hood and use the prop rod to secure it in the open position.

2.) Loosen
½ way as



the Hood bracket nut about
it shows in the picture.



3.) Insert the base of the hood bracket in the openings in the hood as shown in the picture.



4.) Use a 14mm deep socket to tighten the mounts to the hood.




5.) Remove the 10mm fender bolt as shown in the pictures.




6.) Install the fender mounting bracket, facing down as shown in the picture.



7.) Install the Gas Strut on the upper bracket, then the lower bracket.

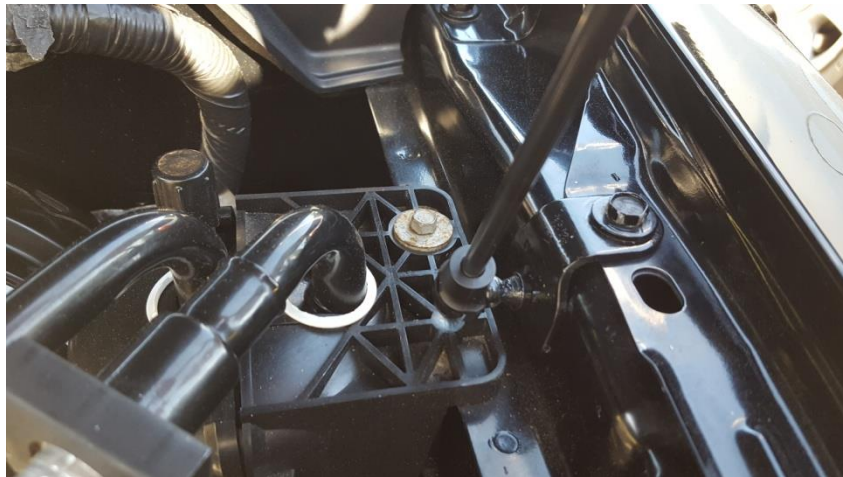

Repeat steps 1-7 on the passenger's side.

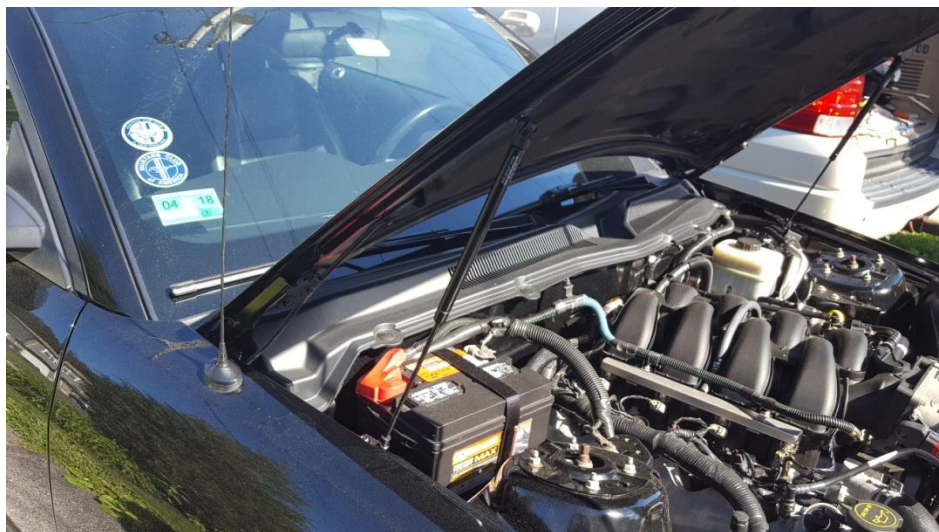

Installation Guide Created and Submitted by AmericanMuscle Customer, Iyman M. on 6/15/16