



15-16 Smoked LED Turn Signals

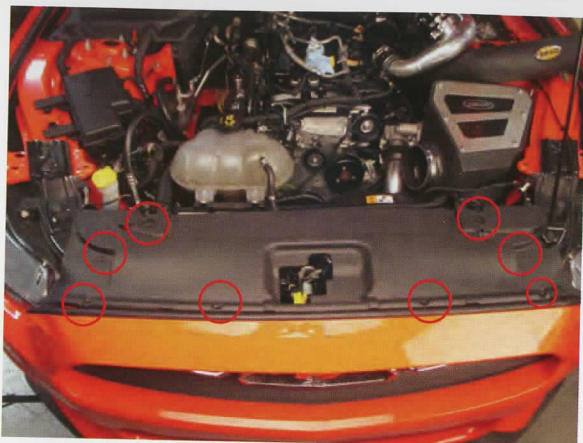


Step 1

Remove the (8) clips securing the plastic radiator cover to the radiator support and remove it from the vehicle.

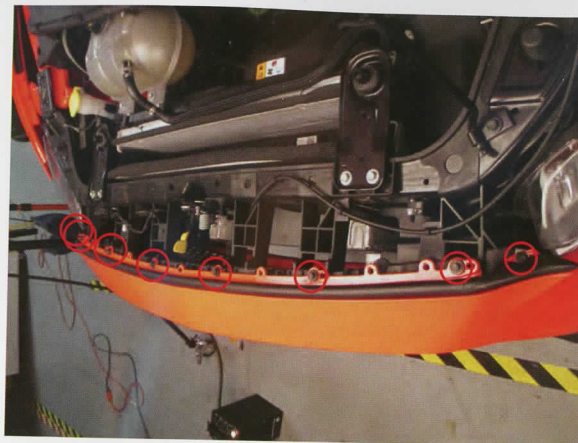

Step 2

Remove the (8) bolts securing the bumper cover to the radiator support.

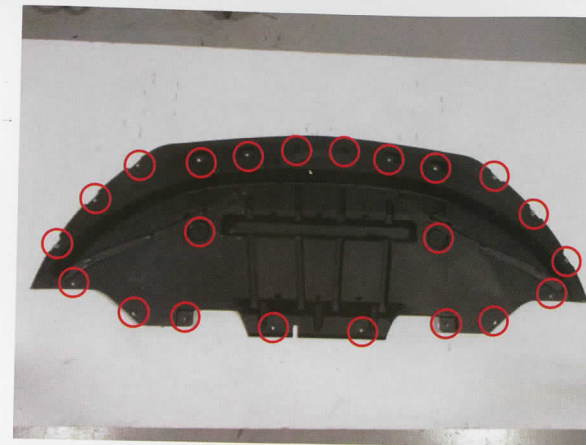

Step 3

Support the front of the car so you can access the bumper splash shield. **Note there are two versions of the splash shield. Both are attached to similar locations.




Step 4

On each side of the bumper, remove the plastic clips holding the fender liner to the bumper.




Step 5

Fold back the fender liner so that you can access the one bolt that holds the bumper to the fender. **Note: This bolt is tricky, it may help to remove the wheel for better access.

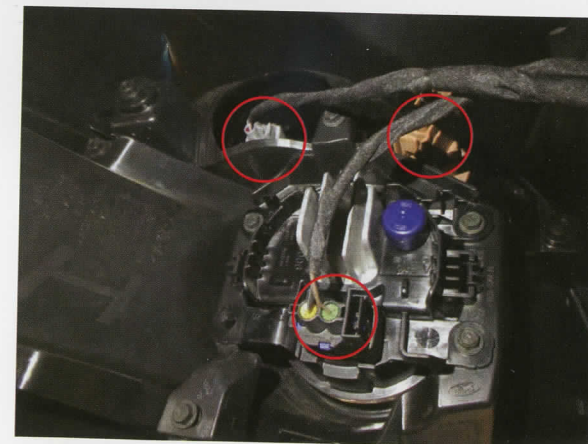


Step 6

With the splash shield pulled back, you can access the plugs for the turn signals and fog lights. Then remove bumper.

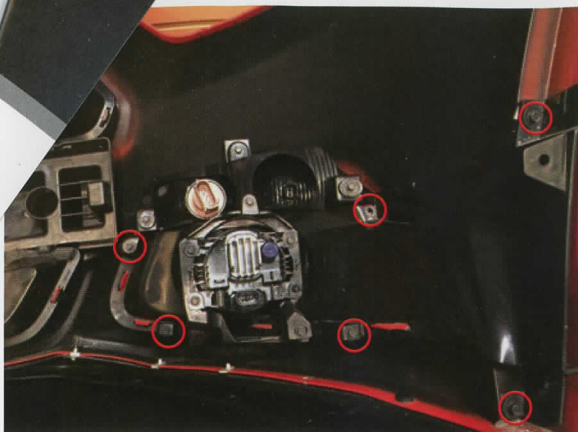**Step 7**


Using a 7mm socket, remove the screws holding the turn signal bracket to the bumper. Then gently pry the bracket from the bumper.

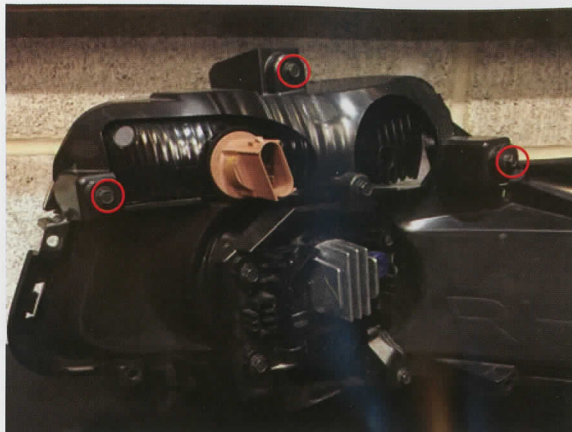**Step 8**


Remove the (3) 7mm screws holding the turn signal to the bracket. Then remove the turn signal.

**Step 9**

Using the existing hardware, reinstall the new Raxiom Smoked Signal. **Note: Be careful not to pinch any wires. Reinstall in reverse order.

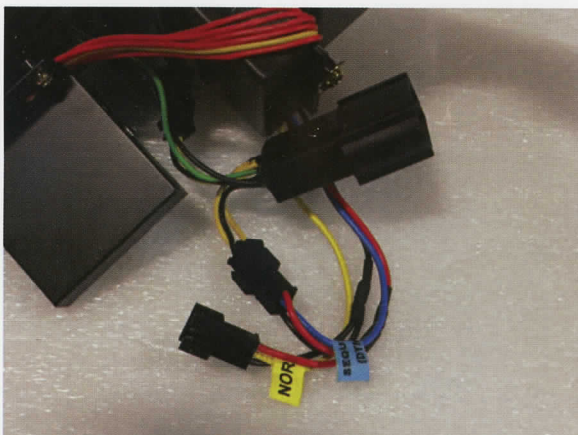**Optional**

Lights will come wired to sequence with the turn signals as seen above. If you prefer them not to sequence, see Disabling Sequencing Turn Signal in the next step.

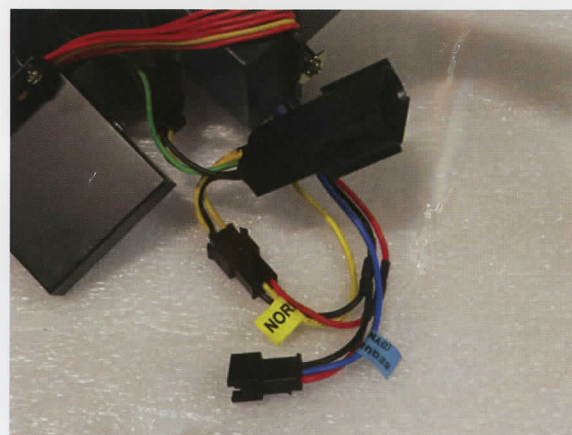**Optional Disabling Sequencing Turn Signal**

Simply unplug the red, blue, and black wiring labeled (SEQ) and plug in the red, yellow, and black plug labeled (Norm) as seen above.