

15-16 Hood Vent Scoop

REQUIRED (4) Clip Studs **Tools:** - 1/4" Socket Set
 - Panel Removal Tool or Pliers



1 Remove the hood liner push pins and hold back the liner to gain access to the factory hood vent mounting nuts.



2 Remove the (2) 9mm nuts holding the factory vent in place, depress the vent clips on the underside and remove.

****Note:** It is important to hold the vent while applying pressure to prevent any damage to the painted hood surface. The vents have a tendency to pop out.




3 Install the supplied clip stud to the underside of the Hood Vent Scoop.



4 **Optional:**
 Tape off the hood vent (inside the dashed white lines above) and apply a black removal paint such as plasti-dip. This will prevent the body color to show through the vent opening. It is recommended that you apply 4-5 medium coats for ease of future removal.



5 Test fit the Vent Scoop. Then remove the 3M tape backing from the mounting lip.

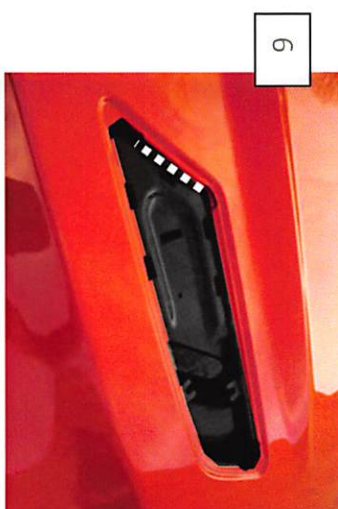

6 Apply downward pressure on the rear of the Vent so that the lip slides under the edge of the hood, then secure with the supplied washers and nuts.

