

Anderson Composites GT350R Style Rear Spoiler - Carbon Fiber

Installation Guide

By Cole Hegwer 2017 Mustang GT

Install Time: 1-2 hours

List Of Tools:

- 1/4" Ratchet
- 10mm Socket
- Ratchet Extension
- Drill
- 1/8" Drillbit
- 9/32" Drillbit
- 5/8" Drillbit
- Center Punch
- Flathead Screwdriver
- Tape
- Scissors

Whats In The box:

- (1) Spoiler
- (6) 10mm bolts
- (2) Small Washers
- (2) Larger Washers
- (3) Thin Foam Tape



- (6) Foam Gaskets
- (6) Drilling Hole Templates

Installation Steps

Step 1

Remove pins on bottom of trunk using a flathead screwdriver and set the carpet to the side



Step 2

Tape the included plastic templates to the bottom of spoiler so they remain in place and don't fall out

Step 3

Place the spoiler on the trunk in the position you will be mounting it, then tape down the templates directly to the trunk



Step 4

Remove the spoiler and add additional tape to support templates in order to avoid any movement



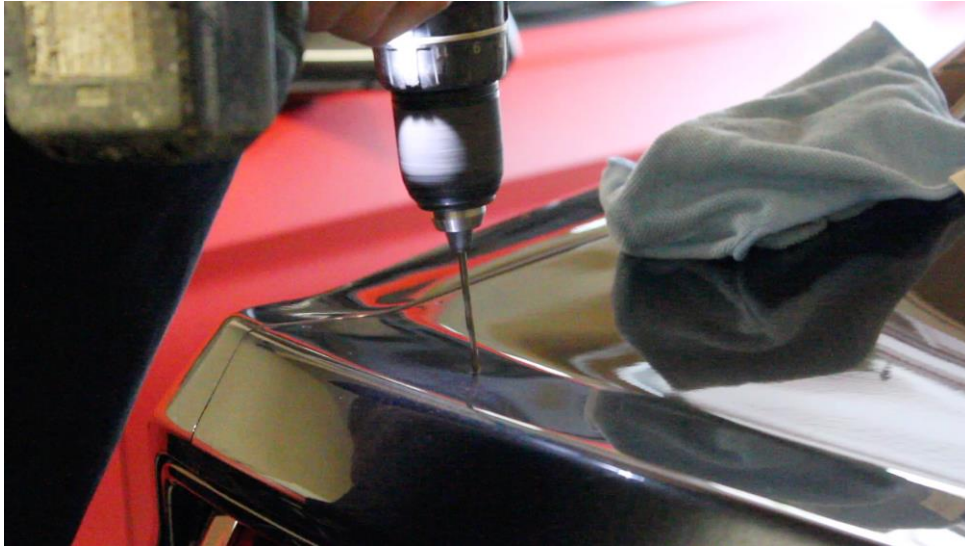
Step 5

Use your center punch to poke an initial mark on each of the 6 templates openings to indicate where the holes will be drilled



Step 6

Drill 1/8" inch pilot holes on all 6 punches that you made with the center punch

**Step 7**

Drill 9/32" inch holes to expand the size of original 1/8" holes you just drilled



Step 8

Drill 1/8" inch hole through the entire trunk on the innermost hole on both sides to puncture through to the bottom side

**Step 9**

Drill a 5/8 hole on the bottom side of the trunk where your pilot hole is showing through



Step 10

Apply gaskets over each hole on the top of the trunk



Step 11

Apply foam tape to the edges of the bottom of the spoiler and use scissors to cut as needed around the edges



Step 12

Set spoiler on trunk and get one of your 10mm bolts started on each side and tighten hand tight to ensure proper alignment

Step 13

Get the rest of the 10 mm bolts into place and tighten them down all the way (You will need to use your extension to get the third bolt on)



Step 14

Put carpet back into place and snap pins back in just opposite of how you removed it

Finished!

