






Step 1
Using a panel removal tool or pliers, remove the (2) lower clips on the trunk trim panel. Then unscrew the upper fasteners.

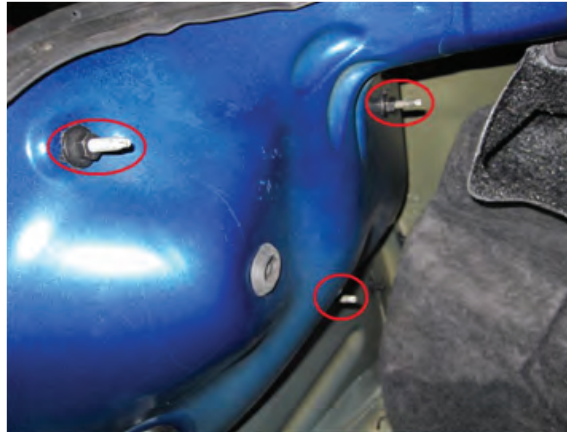

Step 2
Remove the (3) tail lights bolts.

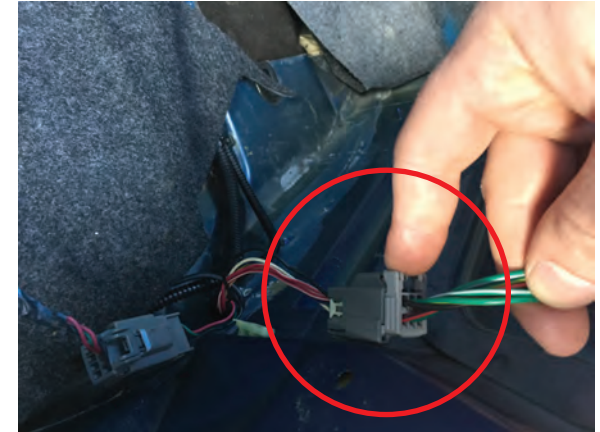

Step 3
Unplug the factory tail light harness, and remove.

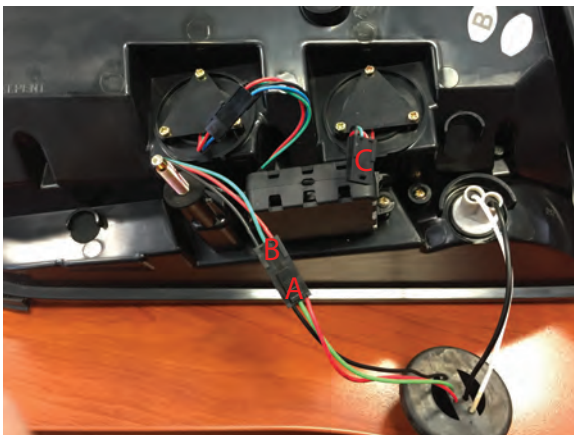

Step 4
Connect A to B to get the lights to sequence with the turn signals. Connect A to C to bypass the sequential turn signal.



Step 5
Transfer the factory reverse bulb into the new tail light.



Step 6
Install the new tail light in reverse order.

Trouble Shooting:
If using LED reverse light, always check the polarity. If needed, flip the bulb in the socket 180°. Cycling the key on and off may also be required.