

WARNING!

Always wear gloves and protective eye-wear when working on your vehicle. If any part of this installation seems beyond your level of installation experience, please seek the help of a professional.

TOOLS REQUIRED FOR INSTALLATION

- 1/8 Flat head screwdriver

Thank you for choosing this Drake Muscle Cars product for your vehicle. Please read these instructions carefully. Make sure you have the correct parts and proper tools before attempting installation.

INSTALLATION


1. Open fuel door.
2. Locate the tab on the inside of the fuel door in the center. There may be a factory sticker covering the tab. If Sticker is covering tab a small slit will need to be cut.
3. Gently pry the tab up using a 1/8" flat head screwdriver (Pic 1) approximately 1/16" and pull the factory fuel door cover away from car to remove. (Pic 2) It should slide off easily.
4. With the factory fuel door cover removed, line up the tabs on new Drake fuel door cover with the slots on fuel door. (Pic 3) Line up the tabs closest to the car first and adjust the fuel door cover until the front tabs are lined up with the slots on fuel door. Push the new fuel door cover towards the car. You will hear a clicking noise when fuel door is locked into place.
5. Gently pull fuel door cover away from car to insure cover is locked into place.



Pic 1



Pic 2

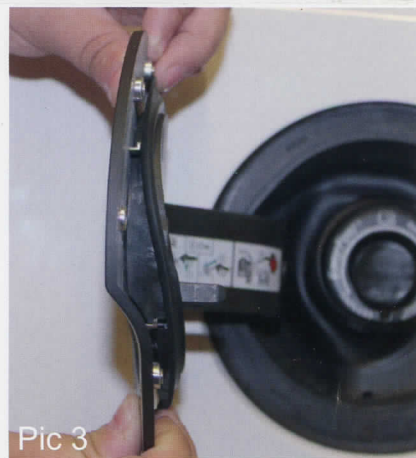

Pic 3



Pic 4

