


2015 Mustang ACT Harness and Sensor Installation PN: 15IATKIT

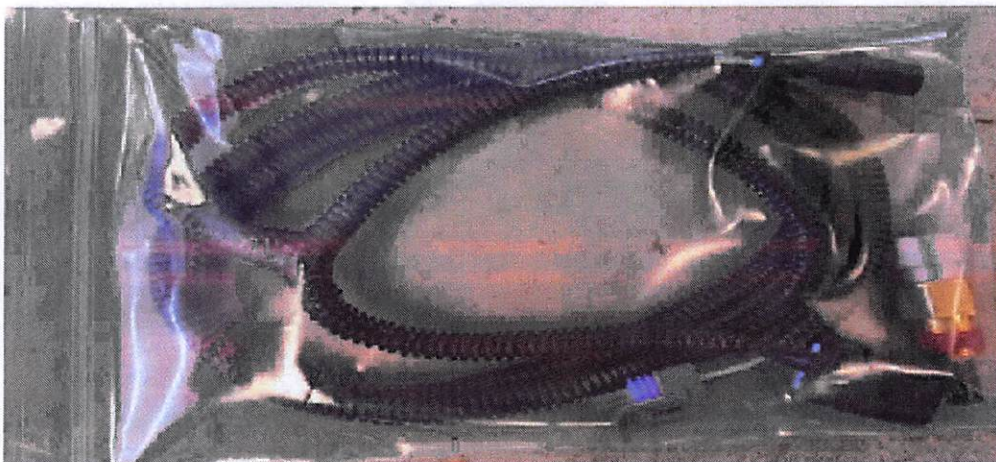

This kit is shipped in 1 bag and includes a Y harness with a total of 3 connectors and one ACT sensor.

If you have any questions before, during or after the installation give us a call Mon-Fri 9-5 at 321-206-9369 or reach out to us via email at sales@vmptuning.com.


Step 1: Connect the male connector of the supplied harness to the factory MAF harness and the female connector to the MAF.



Step 2: Route the harness around to the passenger side of the engine, by going under the inlet elbow of the supercharger, in such a way that it won't get pinched or touch an exhaust manifold.



Step 3: Remove the original ACT sensor from the intake manifold and replace it with the provided sensor using a 19mm deep socket, as shown.

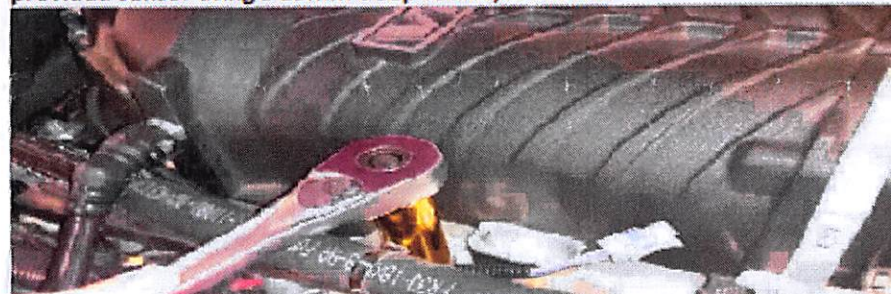

Step 4: Connect the new harness connector to the new ACT sensor. Double check your wire routing and make sure that it is not in harm's way. Double check the MAF connections and make sure that they are all fully engaged and that your red locking clips are also reinserted.

