

# *Installation Instructions for Third Brake Light Decal*

## **Tools Required:**

Spray bottle with dish soap & water mixture

## **Prep:**

Clean car well to ensure good adhesion of the decal. Fill a spray bottle with a mixture of water and soap (we use baby shampoo), about 4 large drops per 32 oz. spray bottle of water. Be sure to install decal out of direct sunlight.


## **Step 1:**

Spray brake light lens with a generous amount of the soap and water mixture.



## **Step 2:**

Peel backing from decal exposing the adhesive.

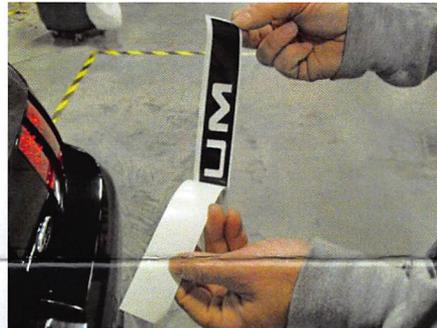


## **Step 3:**

Place decal over third brake light lens. Maneuver decal so it is in the center of the lens.



**Step 4:**

Once you have the decal in its final position, remove all air bubbles by pushing them to the outer edges with a plastic squeegee.

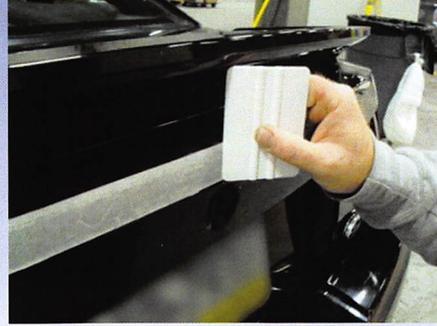

**Step 5:**

Spray the transfer tape with the solution if your product has tape. The solution will help with the release of the tape.



**Step 6:**

After the solution has been squeegeed out from under the decal and the transfer tape has been wet for about ten minutes start to remove the tape. Pull the tape slowly at a sharp angle back away from the decal. It may help to put the squeegee behind the tape to apply pressure to the decal holding it tight against the tape; this will help the decal from lifting up with the tape. Take your time and go slow pulling the tape. Make sure the decal is dry enough underneath, if it lifts up carefully press it down and wait for it to dry more.

Leave several hours, depending on climate, of dry time before cleaning car. Use a quick detailer in a spray bottle for the initial cleaning then hand wash car waiting at least several days for the first time after drying. ***Do not power wash vinyl or wax vinyl.***

**Customer Service: 1-866-727-1266**