


— Installation Instructions

#1598-0412-01

2015+ Ford Mustang, 2.3L Ecoboost & 3.7L V6

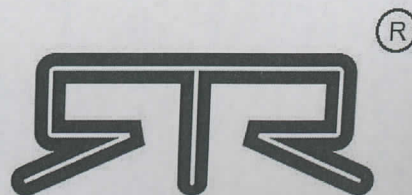

Kit Contents	Description	Part Number	Qty
	Front Spring	1598-0405-01	2
	Rear Spring	1598-0407-01	2
	Front Bump Stop	BS770044	2
	Front Dust Boot	BS770041	2
	Rear Bump Stop	BS770060	2
	Instructions	1598-0412-01INST	1

NOTES: Read All Instructions Before Beginning Installation

- Only qualified mechanics experienced in the installation and removal of suspension components should perform this installation.
- Use of a hoist is highly recommended and will substantially reduce installation time.
- Never work on or under a vehicle unless it is properly supported by safety stands and wheels are blocked.
- Never use impact wrenches or impact guns to install or remove shock absorber piston components, shafts and piston rod nuts.
- RTR springs should be installed with the RTR Logo right side up. All original stock spring isolators, dampers and tubing should be retained from the stock springs and used when installing the RTR Springs.
- After installation, it is always important to inspect and adjust the following if necessary:
 - Wheel alignment such as camber, caster & toe
 - Tire and/or wheel fender clearance, when aftermarket tires and wheels are used.
 - Brake line clearance and attachments
 - Brake anti-locking and anti-skid system sensors
- **Tire Rotation:** In order to increase the life of your tires, it is recommended to rotate your tires every 3,000 miles.
- For MacPherson Strut type front suspension, it is important to mark the orientation of the upper perch with respect to the lower perch before disassembly. This orientation must remain the same with the installation of the Pro Kit springs. Noise may result if this procedure is not performed correctly.

Bump Stop Modification Instructions

Typical Bump-Stop
(Bump-Stop from your vehicle may have different shape)

