


2015 GT350 Style Chin Spoiler

REQUIRED Socket Set
Flat Screw Driver

Panel Removal Tool

**NOTE:

The bumper does not need to be removed from the vehicle for installation.

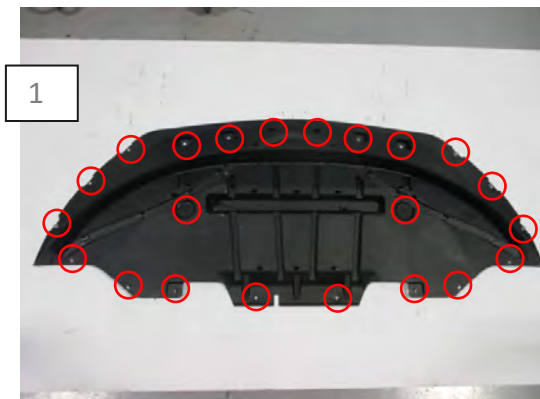

Support the front of the car so you can access the bumper splash shield. **Note there are two versions of the splash shield (Track Pack and Non Track Pack). Both are attached to similar locations



Remove the fasteners holding the chin spoiler to the bumper. Base and Performance pack cars are secured using similar hardware.



Transfer the screw clip from the factory chin spoiler to bumper cover as seen above.



Install the GT350 Style Chin Spoiler using the factory hardware, then reinstall the factory splash shield.