

### Step 1:


Begin by removing the battery cover trim panel. and disconnecting the positive battery cable. Remove the clip holding the battery cable to the strut tower.



### Step 2:

Remove the (2) M10x1.25 nuts from the upper strut mount on both sides.

**\*\*Note:** There are M10x1.25 and M10x1.5 Nuts it is very important that the newly supplied nuts are installed on the correct studs otherwise you will cross thread the stud.

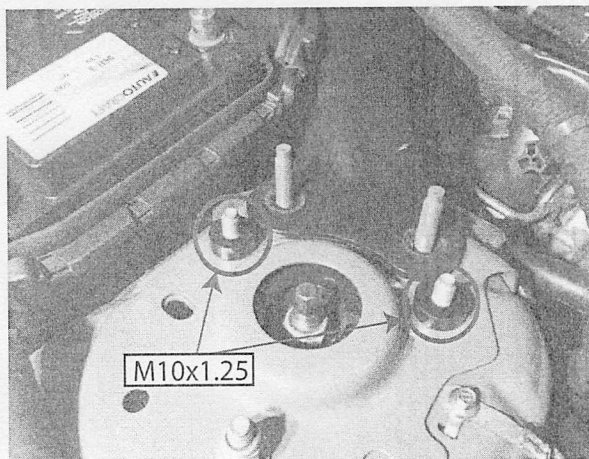

### Step 3:

Next, remove the (2) M10x1.5 Bolts from the painted chassis brace studs on both sides. Performance Pack cars will have this brace on both sides. Non-Performance Pack cars will only have this brace on the passenger side.

**\*\*Note:** There are M10x1.25 and M10x1.5 Nuts it is very important that the newly supplied nuts are installed on the correct studs otherwise you will cross thread the stud.




### Step 4:

Place the supplied spacers on any studs that do not already have a black chassis brace. The picture below shows what the chassis brace looks like.

Non-Performance Pack cars will get (6) spacers total. (2) on the passenger side and (4) on the driver side.

Performance Pack cars will get (4) spacers total. (2) on each side.

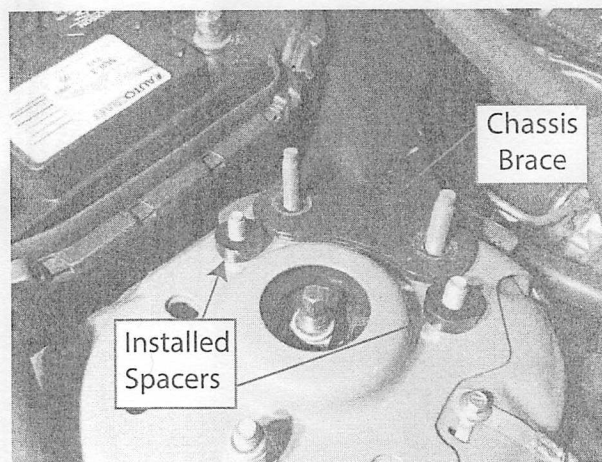

397326  
397327  
397328  
397329



## 2015-2017 Strut Tower Brace

### Contents:

- (1) Strut Brace
- (4) M10x1.5 Nuts
- (4) M10x1.25 Nuts
- (8) M10 Washers
- (6) Spacers



### Important Notes:

Professional Installation is  
Highly Suggested.

### Tools Needed:

Metric Socket Set  
Torque Wrench