


Installation Instructions for 2010+ Mustang Light Trim

Quarter Light Trim:

Step 1: Use the supplied alcohol pads to thoroughly clean the area where the light trim will be applied.



Step 2: Peel the backing from the 3M tape and place the trim over the quarter light. Once positioned properly, press down firmly to fully seat the adhesive tape.

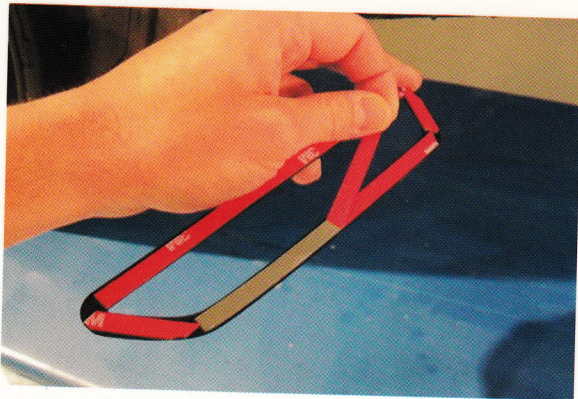

Install opposite side quarter light trim to complete the installation.

3rd Brake Light Trim:

Step 1: Use the supplied alcohol pad to thoroughly clean the area where the light trim will be applied.



Step 2: Peel the backing from the 3M tape and place the trim over the 3rd brake light. Once properly positioned, press down firmly to fully seat the adhesive tape.



This completes the installation of your 3rd Brake Light Trim.