Modern Billet Satin Seat Release Levers (10-14 All)

Hardware included in the box:

(2) Satin seat release lever

Installation time: 15 Minutes or less


Tool needed: plastic trim remover





Installation procedure:

1. Safety first! Make sure engine is turned off and vehicle is parked on a level surface.

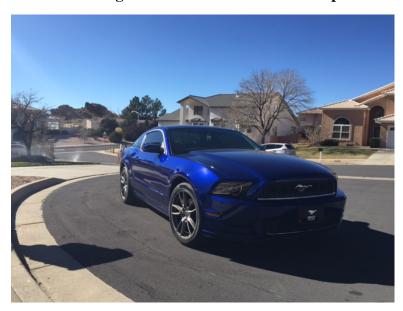

2. Locate seat release lever located behind driver and passenger seat.



3. Using trim remover, gently pull sock release lever away from car seat. Do not use pliers or screw driver as it may crack stock release lever.



4. Once removed this is what they look like.





5. Satin release lever from American muscle have different markings for passenger and driver seat. Use lever with (D) marking on driver seat and use lever with (P) marking for passenger seat.



6. Simply align new satin levers with metal and slide into place for a snug fit.



7. Installation procedure completed.



Installation Guide written by AmericanMuscle Customer Allen Syed 01.08.2015