

---

***Solid Motor Mount, 4.6L, 1996-04 (MMSMM-2)***

---

This kit includes:


- 1 Solid Motor Mount, 4.6L, Passenger Side
- 1 Solid Motor Mount, 4.6L, Driver Side
- 2 9/16 G8 Flat Washer
- 2 M14-2.0 Lock Nut



*Read all instructions before beginning work. Following instructions in the proper sequence will ensure the best and easiest installation.*

1. Remove the stock engine mounts per the instructions detailed in the Ford Manual.

*NOTE: The mounts are Driver and Passenger side specific. Match the MM mounts to the OEM mounts being removed.*

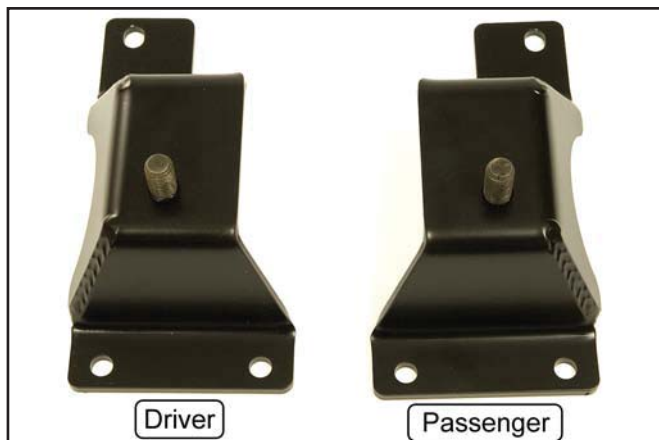

2. Install the MM Solid Motor Mounts.
3. Torque the fasteners to the following specifications:

Motor Mount to Engine Block: 52 ft-lb

Motor Mount to K-Member: 94 ft-lb