raxiom advanced lighting solutions

Raxiom LED Installation

Tools Required: -Small Flat Head Screw Driver

**NOTE: Depending on bulb style, some will only fit the housing by removing the clear lens.




Step 1. Use a small flat screw driver to carefully pry up the lens cover. Note the orientation of lense to the housing.



Step 3. Note: Some LED bulb fit snuggly which can potentially push the bulb socket out of the housing while installing the bulb, if this happens simply removing the housing and hold the bulb socket while you push the bulb in through the lense opening



Step 2. Remove the factory bulb and instsall the new LED bulb.

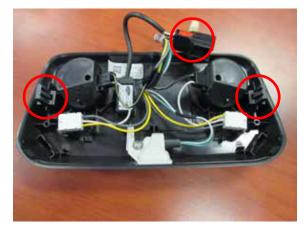

Step 4. Note: The 2 clips that hold the housing to the headliner. Disconnect the plug to remove entirely.