



## 2005-2014 Mustang Rear Sway Bar Relocation Bracket

### Contents:


- (2) - relocation brackets
- (4) - long hex head bolts
- (4) - small washers
- (2) - short cap head bolts
- (2) - large washers
- (2) - coarse thread lock nuts
- (4) - fine thread lock nuts

### Tools Needed:

- socket wrench
- 15mm socket
- 9/16 socket
- 9/16 wrench
- marker
- hack saw



It is recommended that you have an additional person available to help during this installation, parts can be awkward to hold and support by yourself. Block wheels and set parking brake before beginning work. Both sides of the car need to be lifted at the same time, or pressure will be created on the sway bar and will make the install more difficult.

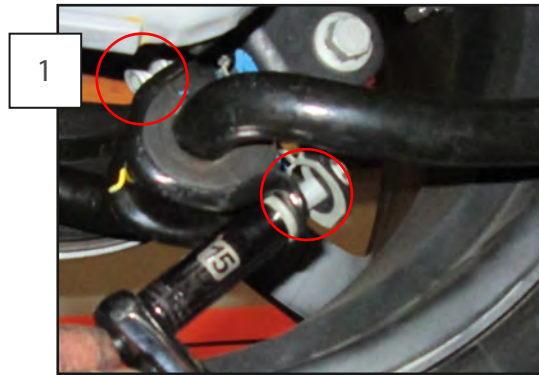

Remove the (2) 15mm sway bar mount bolts. Remove them by pulling the tab downward and sliding them toward the inside, while pulling them out by the threaded end.



Remove the (1) lower shock bolt that holds the shock to the rear axle. Move the shock out of the way for the install.



Insert a short cap head bolt through the relocation bracket. Insert the bolt into the upper sway bar mount bolt hole. Mark where the bracket ends, remove the bracket and cut off the lower side of the sway bar bracket.



Reinstall the bracket with the short cap head bolt, secure it with a large washer and 1/2" locking nut. Insert a 9/16" long bolt from the shock side through a small washer to the front of the shock mount, use a lock nut to secure it and repeat that process in the lower hole. Complete these steps on the other side and re-secure the sway bar and all hardware.