2011-2014 Ford Mustang GT 2005-2010 Ford Mustang GT

Axle Back System

Part # 4100, 4101, 41005, 41015



Special Tools Required:

Approximately 30-45 mins

Install Time:

Impact or Rachet

Pry Bar

Difficulty:

3 out of 5

Follow these instructions carefully to ensure correct fitment and operation.

STEP 1

Lift and support the vehicle.

STEP 2






Starting on the driver side, loosen the clamps at the mufflers and mid pipes.

STEP 3



Using a pry bar or grommet removal tool, remove the rubber grommet located by the muffler tip from the muffler hanger.

STEP 4

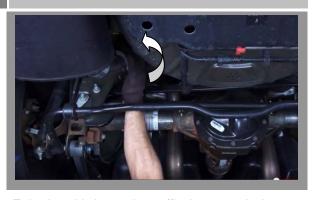

Twist the mid pipe so the muffler has enough clearance to be removed.







Check us out on Youtube www.youtube.com/bbkperformance

GO TO NEXT PAGE

WWW.BBKPERFORMANCE.COM



For any questions, email us: tech@bbkperformance.com



2011-2014 Ford Mustang GT 2005-2010 Ford Mustang GT

Axle Back System

STEP 5



 Slide the muffler towards the front of the vehicle and remove.

STEP 6 (Only for 2011-14 Mustang GT)



 NOTE!! On 2011-2013 Models you will need to remove the factory clamp from the stock muffler to use on the inlet tube for the BBK Axle Back System. The clamp has a very small and brittle tack weld on it only for the factory production line use. Its easily removed by cutting or wiggling the clamp back and forth until it breaks off the stock muffler.

STEP 7

Repeat steps 2-6 for the passenger side.

STEP 8



 Starting on the driver side, slide the inlet pipe through the 2 hanger grommets and into the mid pipe and snug the clamp to hold the tubing in place.

STEP 9



 Slide the muffler over the inlet pipe, then slide the grommet closest to the rear bumper onto the muffler hanger.



Revised 2/25/2013





GO TO NEXT PAGE

WWW.BBKPERFORMANCE.COM



For any questions, email us: tech@bbkperformance.com

installation instructions






2011-2014 Ford Mustang GT 2005-2010 Ford Mustang GT

Axle Back System

STEP 10

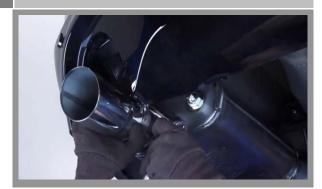

 Slide and snug the exhaust tip onto the outlet tube of the muffler.

STEP 12



 With all the clamps snug, make any fitment adjustments starting at the front clamps on the mid pipe and ending at the muffler tips, then tighten.

STEP 11

Repeat steps 8-10 for the passenger side

2011-2013 Mustang GT Dyno Results





Revised 2/25/2013

Join our Facebook page www.facebook.com/bbkperformance





Check us out on Youtube www.youtube.com/bbkperformance

GO TO NEXT PAGE

WWW.BBKPERFORMANCE.COM




For any questions, email us: tech@bbkperformance.com

installation instructions



2011-2014 Ford Mustang GT 2005-2010 Ford Mustang GT

Axle Back System

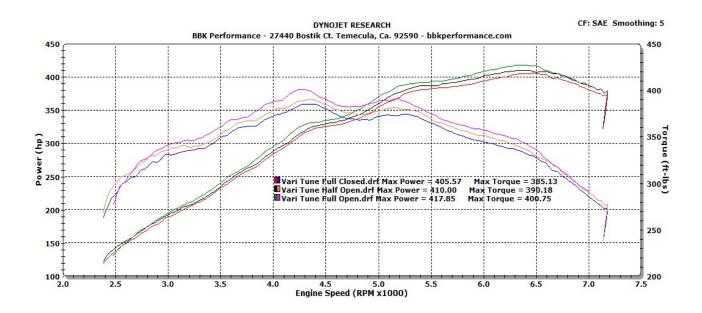

Hardware Included

- Inlet Tubes (2pcs)
- 4102B- Muffler Tips
- Muffler (2pcs)
- KIT4101/5 SCP-248-275 2-3/4" Band Clamp (2pcs)
 SCP-248-300 3" Band Clamp (2pcs)
- KIT4100/5 SCP-248-250 2-1/2" Band Clamp (2pcs) SCP-248-275 2-3/4" Band Clamp (2pcs) SCP-248-300 3" Band Clamp (2pcs)

Stainless steel kits come with SCP-275-### clamps.







Check us out on Youtube www.youtube.com/bbkperformance





For any questions, email us: tech@bbkperformance.com

installation instructions



Revised 2/25/2013