Universal Vari-Tune Muffler Part # 3101, 31015, 3102, 31025, 3103, 31035




Tools Required: Install Time:

Basic Tools Approximately 30 mins-1 Hour

Difficulty:

1 out of 5

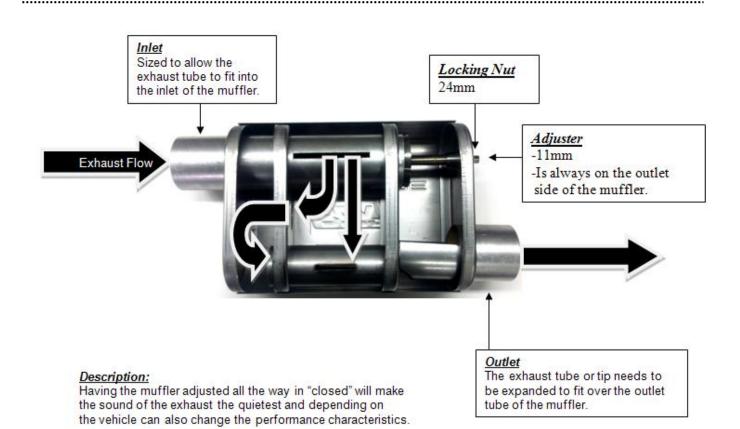



Join our Facebook page www.facebook.com/bbkperformance





Check us out on Youtube www.youtube.com/bbkperformance

GO TO NEXT PAGE





For any questions, email us: tech@bbkperformance.com

installation instructions



Universal Vari-Tune Muffler Part # 3101, 31015, 3102, 31025, 3103, 31035

As you adjust the muffler open this allows the exhaust to bleed through and bypass the second baffle and go straight through the outlet tube. This increases the sound of the exhaust and depending on the vehicle will also change the performance characteristics.



Adjusting the Vari-Tune Muffler

- Step 1: Loosen the locking nut and turn the adjuster counter-clockwise to open up the adjustable bypass cone.
- Step 2: Once you have reached the desired setting tighten the locking nut by holding the adjuster in place with a 11mm wrench and tighten the locking nut with a 24mm wrench.

<u>IMPORTANT!!!</u> Do not adjust the Vari-Tune Muffler while the muffler is hot. Allow the muffler to cool down to prevent the adjuster from seizing.



Revised 2/25/2013









For any questions, email us: tech@bbkperformance.com

installation instruction

2