

1994-2004 Roof Spoiler

Contents:

- (1) - Roof Spoiler
- (1) - Alcohol Prep Pad
- (1) - Adhesion Promoter




Before beginning, be sure to thoroughly clean the rear window to remove dirt and any other debris that may prevent the tape to bond properly.

1



Wipe down the outer upper edge of the rear window with the supplied alcohol prep pads where the spoiler will adhere. Once dry, follow with the supplied 3M Adhesion Promoter.

2b

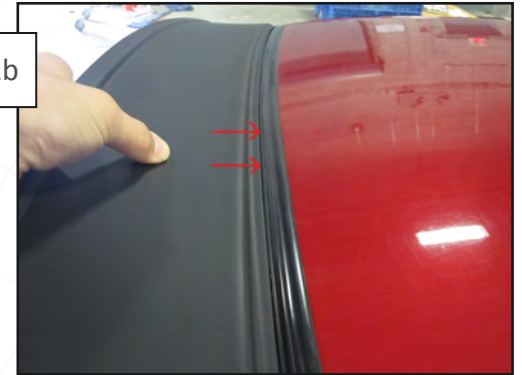

Pull the center of the spoiler up so it is even with the window weather stripping. Once the spoiler is properly located, press down firmly around the edges to fully seat the adhesive tape.

2a



Peel the backing from the 3M tape and place the spoiler over the rear window (do not let the tape adhere yet). Tuck the outer edges of the spoiler into the quarter window trim as shown.



MMD
MODULAR MUSCLE DESIGN