Supplemental Installation Instructions for MMD Carbon Fiber Exterior Accessories

This supplemental guide is to be used in addition to the full installation guide included with your purchase. This guide will ensure that the 3M adhesive tape bonds properly to both the product and the vehicle and does not come loose from the vehicle.

Step1: Using the supplied alcohol prep pads, thoroughly wipe down the areas of the part where the adhesive tape will be applied.


Step 2: Once the alcohol has dried (30-60 seconds), wipe the surface with the included 3M Adhesion Promoter Pad.

Step3: Wait 60 seconds for the Adhesion Promoter to dry then apply the included 3M tape as shown in the photos below. You may now proceed with the main installation guide that shows how to apply the product to the vehicle.

71326-77 / Antenna Cover (05-14)



71332-77 / Emblem Surround (10-12)

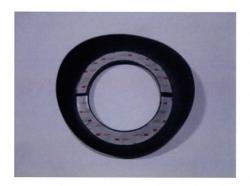



41271-77 / Tail Light Trim (10-12)



71324-77 / Tail Light Trim (13-14)



71336-77 / Roof Spoiler (05-14)



71329-77 / Ducktail Spoiler (10-14)

There is a roll of 3M tape provided with this spoiler. Cut the tape to proper length and apply around the outer edge on the underside of spoiler.



2005-2014 Roof Spoiler

Contents:

- (1) Roof Spoiler
- (1) Alcohol Prep Pad
- (1) Adhesion Promoter



Before beginning, be sure to thoroughly clean the rear window to remove dirt and any other debris that may prevent the tape to bond properly.



Wipe down the outer upper edge of the rear window with the supplied alcohol prep pads where the spoiler will adhere. Once dry, follow with the supplied 3M Adhesion Promoter.



Then push the center of the spoiler up towards the back edge of the glass. Once the spoiler is properly located, press down firmly to fully seat the adhesive tape.



Peel the backing from the 3M tape and place the spoiler over the rear window (do not let the tape adhere yet). Line the upper corners of the spoiler with the upper corners of the rear glass as shown.