


FITS MOST AUTOMOTIVE SCREWS & BOLTS

TWO PACK


2 COVERS

2 WASHERS

High Impact ABS Plastic Chrome  
Plated Screen Printed in Their  
Respective Two-Tone Finish.



1. Position washer then insert screw. Hold in place with screwdriver. Tighten bolt on backside with wrench.

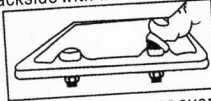

2. Line up screw cover over cap holder, push down until it snaps on securely.

PKC1488A