

## **Modern Billet Polished Billet Defroster Button (94-00 All)**

### **Required Tools :**

7mm socket  
Ratchet  
Flat screw driver

### **Included Parts :**


1 Modern billet polished defroster button

### **Before**



## Removal procedure :

- 1) Start by removing your headlight knob with the help of your little flat screwdriver. You need to turn on your light by pulling out the headlight knob. After that you need to press the little metal plate forward. By the same time you will be able to pull out the headlight knob

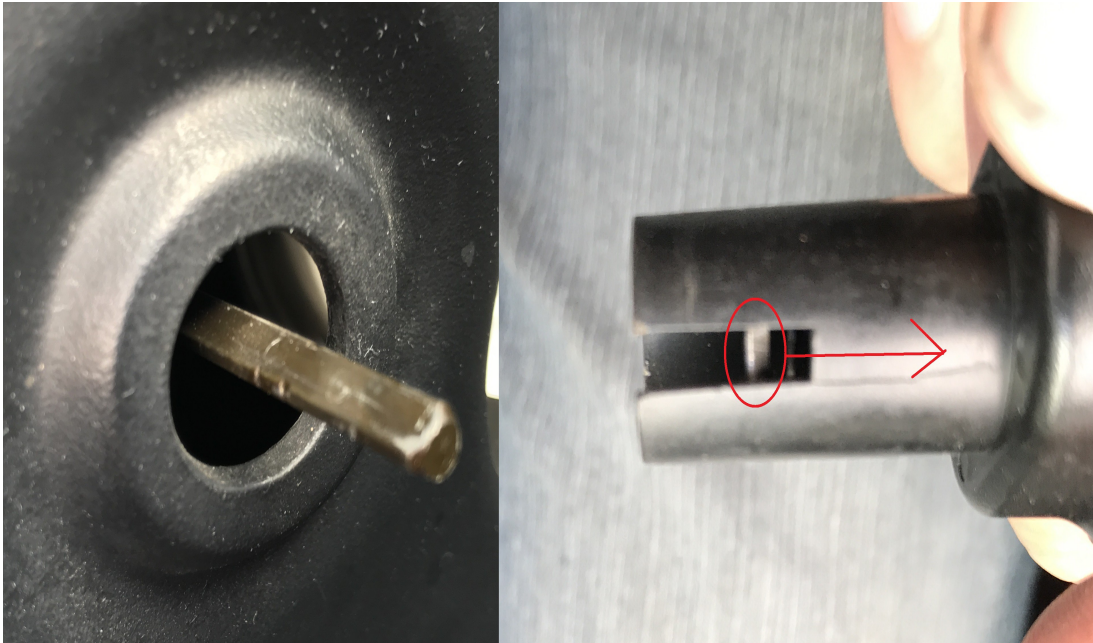

- 2) Remove the 7mm bolt from the dash board with your 7mm socket



3) Carefully remove your dash board cover by pulling it out. The dash board cover have 5 plastic stud so you need to take your time to corecly remove it.




4) Now you can remove your defroster relay modul from your car by pressing the 2 metal clip.



5) Now you can remove your defroster button. Be careful with the 6 plastique clip if you do not want to break you plastique defroster button



6) Now you can press your new aluminum buton on your defroster relay modul.

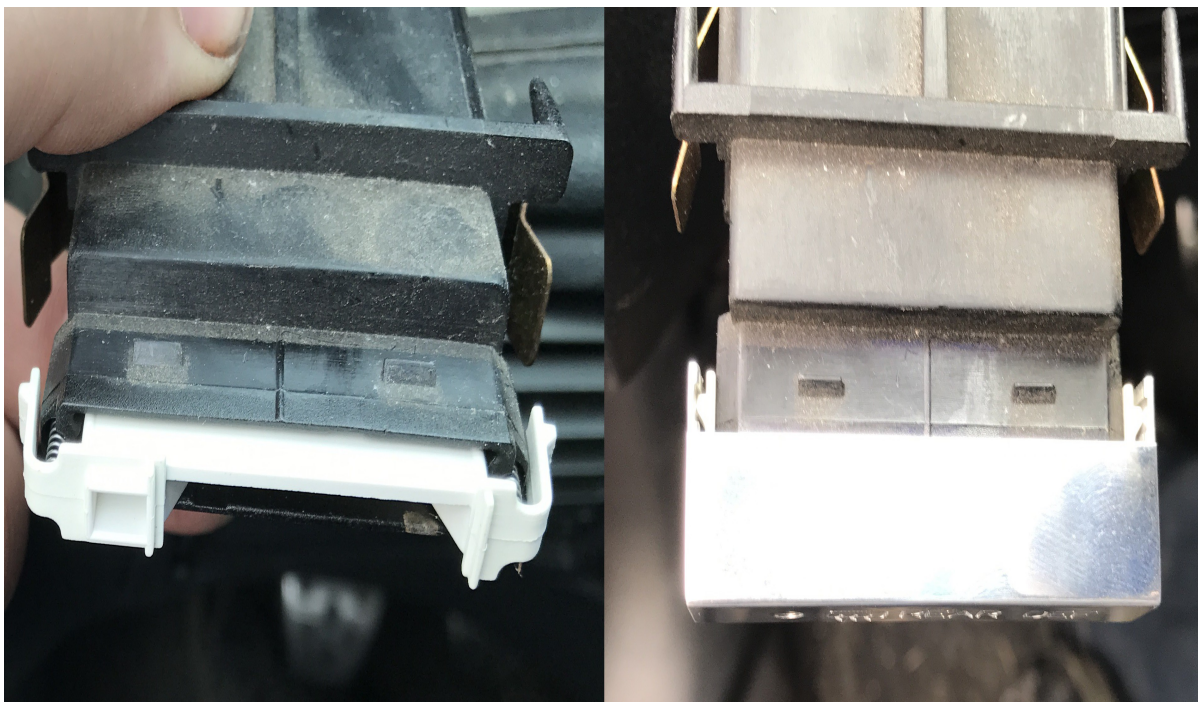

1) To reinstale your defroster modul and your dash board cover, folow the step 1 to 6 in reverse.

### **Finishing result**



Installation instructions written by AmericanMuscle customer Christian Renaud 27/04/2017